

ECLIPSE AVN726EEW - Software Update Instructions

PREPARATIONS

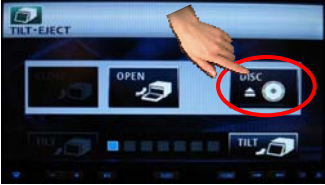
Have a blank CD-R ready and download the applicable update file for your model version. Burn the update file to a blank CD-R which will then function as the Update Disc.

CAUTION

*Please make sure that the update file is not renamed or altered in any form. The update file have to be burned to the root directory of an empty CD-R by "ISO9660" format or "Joliet". Any change to the file name will invalidate the Update Disc and not allow the update to be performed.

*Ensure power supply is never switched off or unplugged during updating, otherwise it could result in an unstable or inoperable system.

*An update will default the unit to factory settings (radio stations, audio settings, phonebook etc. will be deleted).

1. 

Tap on **[DISC]** and insert the update disc.

2. 

Push **[MENU]** button.

3. 

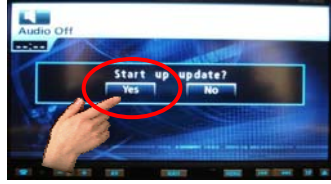
Tap on **[Audio Off]**

4. 

Push **[AV]** button.
(if audio screen is not displayed)

5. 

Tap display corners in the order
A ⇒ B ⇒ A ⇒ C ⇒ A ⇒ D

6. 

Tap on **[YES]**

7. 

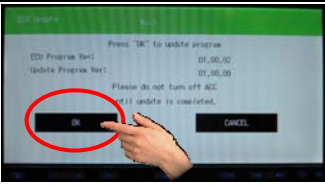
Wait until update disc is verified
(approx. 1 minute).

8. 

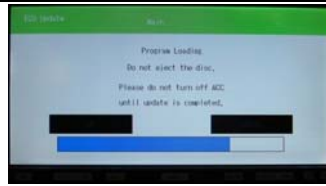
Tap on **[Select]**

NOTE

If **[Select]** is not highlighted, the device already incorporates the latest software version. In this case turn off power supply to cancel the update mode. Turn power on again and go to step no. 13.

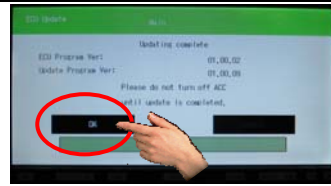
9. 

Tap on **[OK]**

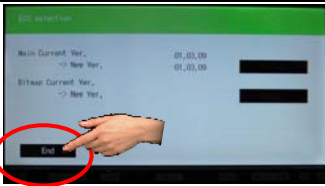
10. 

Software updating starts
(approx. 2 minutes).

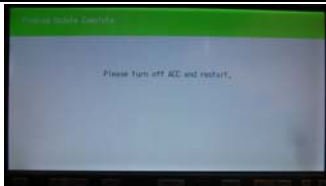




Tap on **[OK]** when updating is completed.

11. 

Tab on **[End]**

12. 

Turn off power supply and wait for 10 seconds. Turn power on again.

13. 

Tab on **[DISC]** and eject the update disc. Updating is now completed!