




Navigation

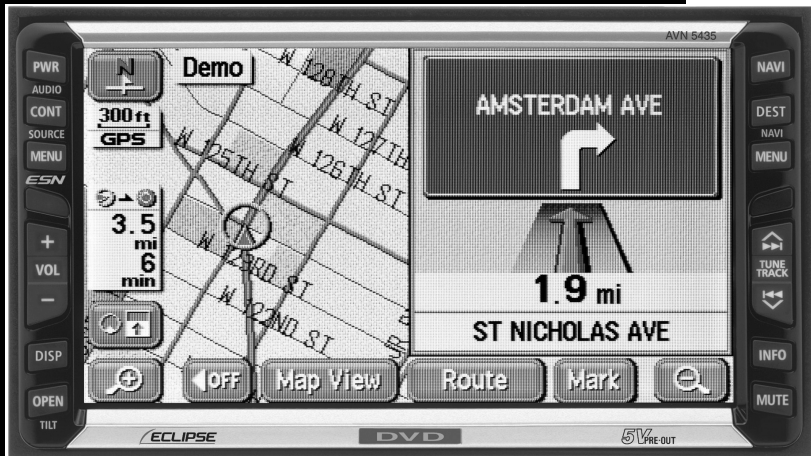

AVN5435

ESN E5 6.5" Wide TFT Touch-Panel Display
CD/DVD Multi-Source Receiver with DVD Navigation

We appreciate your purchase of this receiver.
Please read through this manual for correct operation.
We suggest that after reading it you keep this manual
in a safe place for future reference.

NAVIGATION SYSTEM

The navigation system uses maps and vocal instructions to guide you while you are driving. However, depending on accuracy of that guidance, there may be times when inappropriate advice is given. When driving along the route set by the navigation system, make sure to follow the actual traffic regulations at all times (such as one-way streets and other road conditions).

Warnings and caution signs, illustrated below, are posted throughout this manual as well as on the AVN5435. They show safe and correct ways to handle the product so as to prevent personal injury to you and others and avoid damage to property. Before reading through the manual, take time to read through and learn the important information listed in this section.

Cautions for use

Make sure your positioning is stable prior to starting your journey

- Start driving only after the GPS mark appears. Starting to drive with improper positioning may lead to vehicle positioning errors.

* The images appearing on the screen may differ from those shown in this manual depending on the type of map DVD-ROM used and when it was created.



Warning

This sign indicates a situation in which incorrect handling through disregard of a sign might result in death or serious personal injury.



Caution

This sign indicates a situation in which incorrect handling through disregard of a sign might result in personal injury or may result solely in damage to property.

The symbol shown below indicates that you should know about the information in order to carefully follow it or you should remember the information for its helpfulness.



A point it will be helpful to remember.
A point you should know about.

- Please read all materials such as manuals and warranties that have come with the product.
- Fujitsu Ten will not be responsible for unsatisfactory product performance due to failure to follow these instructions.
- Changes to product specifications may result in differences between content of the manual and features of the product.

Please use care in handling the manual.
Forcefully spreading or pulling on pages may result in falling out of the binding.
Use the manual carefully.

Table of Contents

Introduction

How to use this manual	8
Features	10
GPS navigation system	14
How to view the navigation screen	14
GPS	16
Situations when GPS signal reception is impossible	16

Basic operation

MENU screen and list screens	18
MENU SCREEN	18
How to switch the list screens	19
▲ or ▼ switch display	19
Page switch display	19
POI switch display	19
Adjusting the screen and setting the sound	20
Screen adjustment	20
How to display the image quality adjustment screen	20
Contrast/Brightness	21
How to switch to daytime display when the lights are ON	21
How to turn the screen OFF	21
Switching the map display color	22
Switching the clock display	22
Switching miles and km display	23
Switching the Time Zone	23
Switching the Time Zone	23
Setting the Daylight Saving Time	24
Setting the volume	25
Adjust the volume	25
Set the automatic highway volume switch function	25

Map displays 26

Present location display 26

Moving the map (one-touch scroll) 27

 Moving the map 27

 Setting the Street Name display while scrolling 28

Switching the touch switch display 28

 Switching the touch switch display 28

 Setting touch switches to display or not display 29

Switching the map reduction scale 30

 Switching to the desired reduction scale 30

Switching the map orientation 31

 Switching the map orientation 31

Switching to double screen display 32

 Switching to double screen display 32

 Operating the screen on the right 33

 Canceling the double screen display 34

POI display 35

 Display landmarks by a simple operation while driving 37

 Delete a POI landmark 37

 Displaying multiple types 38

 Search for POI vicinity 39

 Displaying a list of POIs along the set route 41

 Displaying POI information 41

 Setting the type of POI vicinity to be retrieved while driving 42

How to retrieve maps 44

Changing the search area 46

Retrieving a map using an address 47

Retrieving a map using a POI name 49

 If narrowing down candidates per area 50

 When narrowing down the list by POI type 52

Retrieving a map in the event of an emergency 55

Retrieving a map using a memory point 55

Retrieving a map using the archive 56

Retrieving a map using an intersection name 56

Retrieving a map using a freeway exit/entrance name 58

Retrieving a map using the latitude/longitude 59

Performing operations on a retrieved map 60

Performing operations on a displayed map 60

Displaying POI information 60

Navigation guidance

Setting the destination and searching for a route 62

Set a destination and search for a route 63

Setting a destination.	64
One-touch setting.	64
Set from a registered point.	65
Set using the map retrieval method.	65
Route search	66
All-route display	67
Route displays	67
All-route display and touch switches	68
Display or bypass a restricted segment.	70
Bypassing a restricted segment.	70
How to display message on a restricted segment	71
Display route data (guided road information).	72
3-route simultaneous display (3-route search function).	73

Changing the search result route 74

Adding a destination.	75
Change the search conditions for each interval.	77
Switching the destination order	78
Deleting a destination.	79
Indicating a transit road	80
Canceling a transit road indication.	81

Starting, pausing and restarting route guidance. 83

Starting route guidance	83
Pausing and restarting route guidance	83

Route guidance. 84

Intersection guidance.	84
A non-junction intersection.	84
A junction intersection (enlarged guidance screen for an intersection)	84
Set automatic display of the intersection guidance screen	86
Set the intersection guidance screen.	86
Ferry crossing guidance.	87

Setting the required time display	87
Setting the average speed	88
Highway junction guidance	89
Canceling the highway junction guidance screen	89
Switching the highway junction guidance screen	90
Voice guidance	91
Setting the auto voice guidance	92

Performing operations on the guided route. 93

Guidance in another mode	93
Setting the guidance when in another mode	93
Redisplaying the all-route display	93
Switching the required time/distance remaining display	94
On-route scroll	95
Start on-route scroll	95
On-route scroll screen operations	95

Reinitiating a route search. 96

Reinitiating a route search	96
Reinitiating a route search	98
Automatic reroute search	99
Setting the automatic reroute search	99

Point registration

What is point registration. 100

Registering, correcting or deleting a memory point 101

Registering, correcting or deleting your home	101
Registering your home	101
Correcting your home	103
Deleting your home	104
Registering memory points	105
One-touch registration	105
Registering a far away point	106
Correcting the position of a memory point	109
Changing the symbol of the memory point	110
Enter a telephone number for a memory point	111
Entering the name of a memory point	112
Displaying the name of a memory point	113
Deleting a memory point	114

Registering, correcting or deleting a special memory point	115
Registering a special memory point	115
Correcting a special memory point	117
Deleting a special memory point	118
Registering, correcting or deleting detour memory points	119
Registering detour memory points	119
Correcting a detour memory point	121
Deleting a detour memory point	122
Destination archive	123
Deleting entries from the destination archive	123

Information function

Information screen	124
Information screen	124
SYSTEM CHECK screen	125

Optional function

Rear View Camera operations	126
Rear View Camera image	128
Displaying the rear view image manually (MANUAL)	128
Displaying the rear view image in reverse gear (AUTO)	128
Rear View Camera settings	130

Helpful tips

Correction of the present location and distance	132
Present location correction	132
Correcting the distance	134

Map DVD-ROM data	135
Map DVD-ROM data display	135
Accuracy and error	136
Positioning accuracy	136
GPS signal quality and reception conditions	136
Present location display error	138
Error due to having changed a tire	138
Correcting the map matching vehicle position sensor	138
Present location display, route guidance accuracy	139
Road and geographic name data	141
Route guidance	141

For reference

Information you should know	144
If one of these messages appears	144
Messages related to general navigation	144
Before asking for repairs	147
Items related to general navigation functions	147
Copyright	148
Glossary	155
Index by topic	157
Information about the maps	157
Route guidance	158
Others	160
INDEX	162

The Index by Topic simplifies searches for explanations about individual features. When confused by an operation, use the Index by Topic to search for information about the operation.

1. How to use this manual

Section title

A title is assigned for each section.

Item title

A number and title is assigned for each item.

● Point registration

1. What is point registration

Up to 106 geographical points - categorized as "home," memory points or special memory points - can be stored on a map by registering them as memory points. There can be one "home" and up to five special memory points. Registering detour memory points (maximum of ten) also ensures that detours will be made through these points when route searches are performed.

Memory points can be registered by selecting from 46 types of mark and 4 types of mark with sound. It is possible to set a name, a name reading, and a telephone number for all these types of mark. (This does not apply to detour memory points.)

Registering memory points and special memory points enables you to retrieve them on a map or when conducting a route search. Use these points effectively.

If you make a mistake in registration, correct it or delete the registration.

(If 106 memory points or 10 detour memory points have already been registered, delete unnecessary points and reattempt the registration.)

Memory Points

The memory points (including your home and special memory points) can be displayed reordered according to registered type, mark, or order of registration, and the points can be selected from a list during point searches and so on.

Memory point with voice alarm

The following functions can be given to memory points with voice.

① Setting to announce the approach to a point with sound

Bell, Chime, Music Box

② Setting to announce the approach to a memory point from a specified direction

Bell (With direction)

Home

Only one registration can be made for your home, and you can search for a route returning you home in a one-touch operation. **Registering this point first is recommended.**

Special memory points

Up to 5 special memory points can be registered and allocated to touch switches to facilitate a search for geographical points. Also, when setting a destination, a route search can be initiated in a one-touch operation.

Areas to avoid

Up to 10 detour memory points can be registered with a name and detour range settable for each point. You can also set names for detour memory points.

Attention

Additional points regarding the operations are given here.



The symbol allocated to a detour memory point cannot be changed.

Point registration

2. Registering, correcting or deleting a memory point

Registering, correcting or deleting your home

One point on the map can be registered as your home.

Register your home to enable a route search to your home from the destination setting screen with one operation. (Refer to page 44)

Registering your home

1 Touch **My Places** in the MENU screen.

2 Touch **Register** for Memory Points.




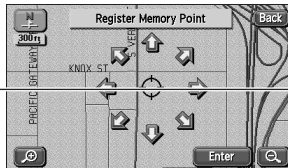
3 Select the map retrieval method and the map on which your home is to be registered will appear.

- See pages 44 and 60, "How to retrieve maps" and "Performing operations on a retrieved map".



4 Touch **Enter**.

- Touch  to move the map.



Operation title

A title is assigned for each operation purpose.

Detailed operation title

A title is assigned for each detailed operation purpose.

Section side heading

Only the section side heading will appear.

Operation screen

A screen showing the operation will appear.

Operation procedure

Describes the operation. Proceed with the operation as per the numerical order.

Go to the next page

The operation procedures are continued on the next page.



ATTENTION

- Registration enabled on a detailed map with a reduction scale less than 1 mile.
- **Edit** and **Delete** can be operated only if a memory point is already registered.



Go to the next page

101

2. Features

Several search methods to choose from (Refer to page 44)

- **Search using a POI name (Refer to page 49)**

When the name of the POI is known, enter it to initiate a search. It is also possible to search by entering only a part of the name.



- **Search using a freeway exit/entrance (Refer to page 58)**

A search can be initiated using the name of a freeway or an exit/entrance




- **Search using latitude/longitude coordinates (Refer to page 59)**

A map can be displayed by directly entering the latitude and longitude coordinates.




- **Emergency search (Refer to page 55)**

In the event of an emergency, a search can be initiated for the nearest police station or hospital.

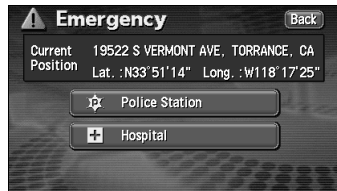

- **Search using the destination archive (Refer to page 56)**

A map can be retrieved using entries previously set in the destination archive.

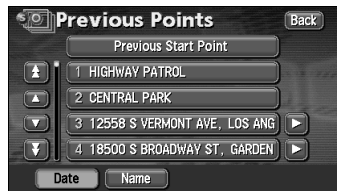

- **Search using a registered point (Refer to page 55)**

A map can be retrieved using your home or a point registered in the memory.



Registering a desired point in the memory (Refer to page 100)

Your home or a geographical point you want to indicate on a map can be registered in the memory. Also, when initiating a route search, points through which you want to make a detour can also be registered in advance.



POI icon display (Refer to page 35)


Various types of POIs can be displayed on a map using icons.



Diverse screen displays (Refer to pages 32, 33, 72)


- **Double screen display**

The screen can be divided into two parts.

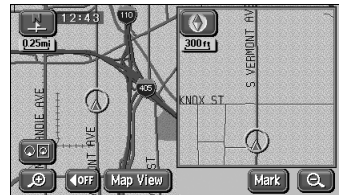


- **Enlarged intersection display**

While route guidance is in progress, an enlarged illustration of the area around an intersection where turn is to be made (junction) is displayed when approaching that intersection.

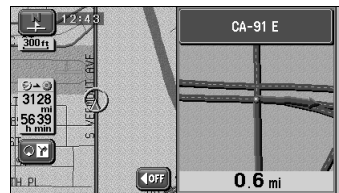

- **Route data**

A list is displayed of all the distances up to intersections and turning directions prior to reaching the destination.

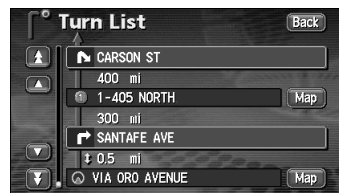

2. Features

3-route simultaneous display (Refer to page 73)

When initiating a route search, three routes (Quick 1, Quick 2 and Short) can be searched for simultaneously.



The map display color can be switched (Refer to page 22)

Four map display colors can be selected for the daytime and nighttime screen display respectively.



System upgrade (Refer to page 126)

- **Rear View Camera**

When the optional Rear View Camera is installed, the view to the rear can be displayed on the monitor screen.



MEMO




3. GPS navigation system

By setting your destination, the device will automatically perform a route search and guide you through the route using screen displays and voice announcements.



How to view the navigation screen

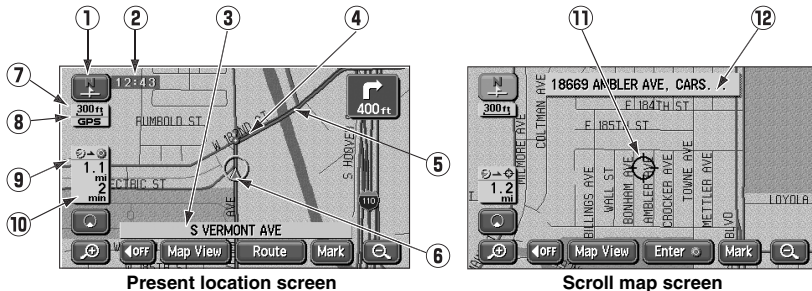The navigation map display consists of a present location screen and a scrolled map screen.



Present location screen

Scroll map screen


- ① **Orientation mark** (, when the bearing is pointing upwards) The map orientation is indicated.
 - Refer to **"Switching the map orientation"** on page 31 for how to switcher the map direction (North up or Heading up).
- ② **Clock display**
The present time is indicated.
 - See page 22 for information concerning this mark's display.
- ③ **Name display**
The following names appear depending on the situation.
(Only geographical points represented as data in the map disk)
 - Names of junction and non-junction intersections
 - Names of roads taken
 - Names of interchange exits
- ④ **Instruction points**
Intersection guidance (intersection name display / intersection guidance screen) is displayed.
 - Refer to **"Intersection guidance"** on page 84 for information concerning intersection guidance.
- ⑤ **Route display**
When setting your destination, the route all the way to that point is displayed.
 - Route guidance will occur only when the present location appears on a dark blue line ().

⑥ Vehicle position mark

The present location and the vehicle direction are displayed.

⑦ Scale display

The reduction scale of the map being displayed is indicated.

The length of the  appearing in the screen above represents 300ft.

⑧ GPS mark

This mark will appear when utilizing the absolute positioning data from the GPS satellite.

- See page 16 for information concerning this mark's display. There may be misalignments depending on the satellite conditions.

⑨ Distance remaining display

The distance from the present location to the destination is indicated.

- While route guidance is in progress, the distance calculated from the route now being taken to the destination is indicated.
- When deviating from the set route, the distance to the destination in a straight line is indicated.
- Refer to "**Switching the required time/distance remaining display**" on page 94 for information on how to switch the remaining distance display.

⑩ Required time display/destination direction mark

The following marks appear depending on the situation.

■ Required time display

While route guidance is in progress, the required time up to the destination is indicated.

- Refer to "**Setting the required time display**" on page 87 for information concerning the required time.

■ Destination direction mark

When deviating from the set route, the direction towards the destination is displayed.

⑪ Cursor mark

This mark is indicated on the map retrieved by a search or by scrolling.

To scroll, simply touch the map (on a spot other than the touch switches on the screen).

⑫ Cursor position name display

The name of the cursor position on the map is displayed (approx. 6 seconds).

Except for some parts describing certain functions, this manual uses normal north-up map screen illustrations to describe the device's functions.

"Map touched" appears signifying that the map was directly touched (on spots other than touch switches).


4. GPS

Global Positioning System (GPS): a system developed and operated by the United States Government that pinpoints your present location by utilizing latitudinal and longitudinal data received from at least 4 satellites (sometimes only 3 are used).

Situations when GPS signal reception is impossible

The following are situations when the GPS signal cannot be received.

- When the GPS signal is obstructed while driving through building clusters, tunnels or on overpasses
- When the signal is obstructed because of having placed an object near or on the GPS antenna
- When the GPS satellite is not sending any signals to the earth (signal emission may be halted due to modifications or repairs conducted by the U.S. Tracking Control Center, the organization responsible for controlling GPS signals)
- When a digitally formatted cellular telephone unit is brought near the GPS antenna

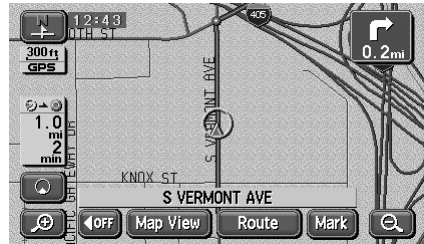

Screen with GPS signal reception in progress



Handling the GPS antenna

- Consult a specialist at the store of purchase for how to install the GPS antenna.
- Do not apply paint or wax onto the GPS antenna. Otherwise, signal reception sensitivity may be diminished or signal reception may be rendered impossible.
- Do not pull on the cord when uninstalling or moving the GPS antenna. Otherwise, short circuits or disconnections may result.
- See page 136 for information concerning GPS signal accuracy and errors. See page 155 for definitions of the terminology employed.

MEMO



1. MENU screen and list screens

MENU SCREEN

1 Press **MENU** to display the MENU screen.

2 The following operations can be performed from the MENU screen.

- Touch the desired item's touch switch to activate.



Item (touch switch)	Function	Page
Suspend guidance/Resume guidance* ¹	Stopping or restarting route guidance	83
Volume	Setting the volume	25
	Setting the automatic highway volume switch	25
My places	Registering/correcting/deleting the geographical data for your home	101, 103, 104
	Registering/correcting/deleting memory geographical points* ²	105, 109, 114
	Registering/correcting/deleting detour memory geographical points	119, 121, 122
Setup	Correction of the present location and distance	132
	Switching the kilometer/mile display	23
	Setting the estimated arrival time	87
	Setting the automatic reroute search	99
	Switching the time zone	23
	Setting the automatic voice guidance	92
	Setting the guidance when in each mode	93
	How to display message on a restricted segment	71
	Set automatic display of the intersection guidance screen	86
	Setting the street name display while scrolling	28
	Setting the switch display	29
	Switching the clock display	22
	Setting the type of POIs in the vicinity retrieved while driving	42
	Switching the map display color	22
Deleting entries from the destination archive	123	
Map DVD	Map DVD-ROM data display	135

*1: The color is toned down if the destination is not set.

*2: Including registering/correcting/deleting special memory geographical points.

How to switch the list screens


▲ or ▼ switch display

Touch ▲ or ▼ to move the list one item at a time.



Page switch display

Touch ▲ or ▼ to move the list one page at a time.

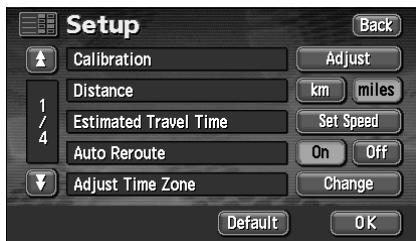

POI switch display

Touch either **Restaurant**, **Shopping**, **Automotive**, **Travel**, **Recreation**, **Community**, **Banking** or **Other** to move the list one POI at a time.

- The touch switch color is toned down for POIs without corresponding lists. Touching a toned-down touch switch will have no effect.




2. Adjusting the screen and setting the sound


Screen adjustment

To make viewing easier, the display switches between day screen/night screen according to whether the vehicle lights (parking lights, taillights, license plate lights) are on/off.

- (Default status)
- Lights turned OFF daytime display
 - Lights turned ON.....nighttime display

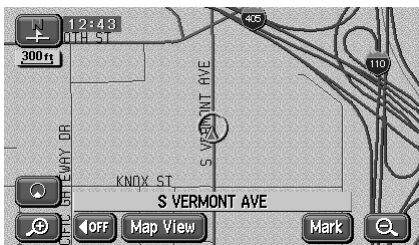

- Daytime display (when lights are turned OFF)

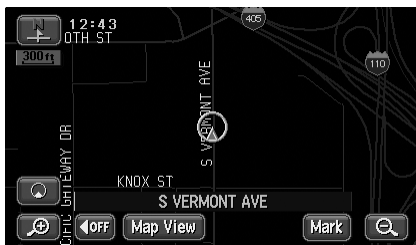

- Nighttime display (when lights are turned ON)

How to display the image quality adjustment screen

- 1 Pressing **DISP** while the Navigation screen is displayed causes the screen to change to the image quality adjustment screen.
- 2 On pressing **ENTER** after adjustment, or on elapse of more than about 20 seconds without operation, setting is completed automatically and the previously displayed screen is redisplayed.



- Image quality adjustment screen

Contrast/Brightness

1 Contrast

Touch **+** to increase, touch **-** to decrease.


1 Brightness

Touch **+** to increase, touch **-** to decrease.

How to switch to daytime display when the lights are ON

1 The daytime display and nighttime display will be switched each time **DAY** is pressed.

- When in daytime display, the touch switches appear green.
- **DAY** is displayed when the lights are ON.

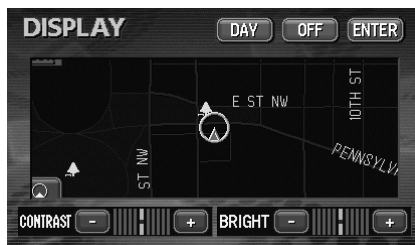

How to turn the screen OFF

1 Touch **OFF**.

- To make the screen reappear, press **NAVI**.



- Even with the screen turned OFF, the GPS present location positioning continues to function.
- The daytime display screen and nighttime display screen can be separately adjusted.

2. Adjusting the screen and setting the sound

Switching the map display color


The map display color (5 color selection) can be switched for both the daytime and nighttime displays independently.

1 Touch **Setup** in the MENU screen.

2 Touch **Normal**, **1**, **2**, **3** or **4** for both Map Color (Day) and Map Color (Night) respectively.

- The pressed touch switch will become green.

3 Touch **OK**.

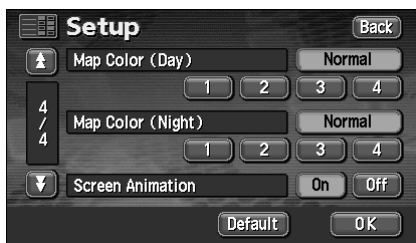

Switching the clock display

The present time display appearing on the map screen can be switched.

1 Touch **Setup** in the MENU screen.

2 Touch **On** or **Off** for Clock Indication.

- The pressed touch switch will become green.

3 Touch **OK**.



- Touch **Default** in the Setup screen to return all items to the default settings.
- The present time displayed is automatically adjusted using GPS signals. (You cannot adjust the time yourself.)

Switching miles and km display


Miles and km display on the map screen can be switched.

1 Touch **Setup** in the MENU screen.

2 Touch **miles** or **km** for Distance.

- The pressed touch switch will become green.

3 Touch **OK**.

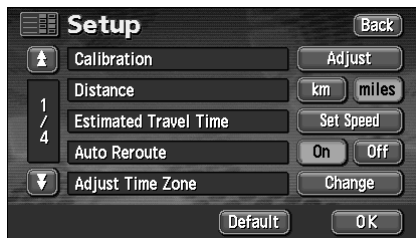

Switching the Time Zone

The time zone for every region in the U.S. can be switched.

Switching the Time Zone


1 Touch **Setup** in the MENU screen.

2 Touch **Change** for Adjust Time Zone.

3 Touch either **Pacific**, **Mountain**, **Central**, or **Eastern**.

- The pressed touch switch will become green.

4 Touch **OK**.

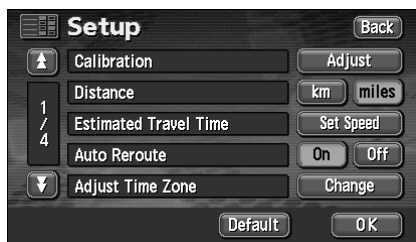

Touch **Default** in the Setup screen to return all items to the default settings.

2. Adjusting the screen and setting the sound

Setting the Daylight Saving Time

1 Touch **Setup** in the MENU screen.

2 Touch **Change** for Adjust Time Zone.



3 Touch **On** or **Off** for Daylight Saving Time.

4 Touch **OK**.



- Touch **Default** in the Setup screen to return all items to the default settings.
- Touch **On** to gain the clock display 1 hour ahead.
Touch **Off** to return the clock display to the previous setting.
- The present time displayed is automatically adjusted using GPS signals. (You cannot adjust the time yourself.)

Setting the volume

The sound volume during route guidance can be adjusted.

Adjust the volume

1 Touch **Volume** in the MENU screen.

2 Touch either **1**, **2**, **3**, **4**, **5**, **6** or **7**.

- The pressed touch switch will become green.
- Touch **Off** to turn OFF the volume. When the volume is OFF, touch any of the volume switches to turn the volume back ON.



3 Touch **OK**.

Set the automatic highway volume switch function


When driving at high speeds, the set volume can be automatically raised one level. Either automatic switch ON (automatically raise) or OFF (not raised) can be selected.

1 Touch **Volume** in the MENU screen.

2 Touch **Adaptive Volume Control**.

- When turned ON, the movement display light turns yellow.

3 Touch **OK**.

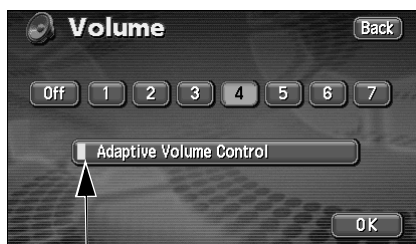

Movement display light



When exceeding 50 mph (80 km/h), the volume automatically increases one level and goes back down to its original level when the speed goes down passed 43 mph (70 km/h).


3. Map displays

Present location display



The present location screen appears when switching the engine to ACC or ON.

- The present location of your vehicle is displayed on the map.
- When the menu screen or any other map screen besides the present location map screen is displayed, press **NAVI** to return to the present location screen.

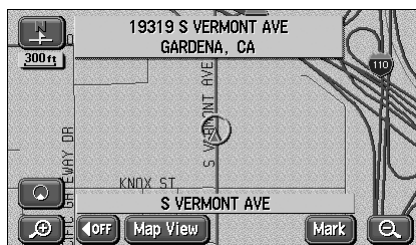- 1 Press **NAVI** in the present location screen to make all the geographical names near the present location appear.



ATTENTION

After having installed the device, or after having reconnected the battery terminal, the vehicle position mark  may differ from the actual present location (misalignment of the vehicle position mark ). Continue driving and, in a moment, the present location will be automatically corrected using the map matching and GPS data. (Depending on the case, this may take several minutes.) If signals from the GPS are not utilized and the present location is left uncorrected, park the vehicle in a safe place and correct the present location. (Refer to page 132)

Moving the map (one-touch scroll)

When a map is displayed, touching the map directly (anywhere except the touch switches) makes the point scroll to the center of the display. The street name around the scrolled point may appear.


Moving the map

1 Touch the map (anywhere except the touch switches).

- On the bottom left of the map, the distance in a direct line from the present location is displayed.
- Touch continuously around the center of the screen and the map will move slowly.
- Touch continuously near the edge of the screen and the map will move quickly.



- While scrolling

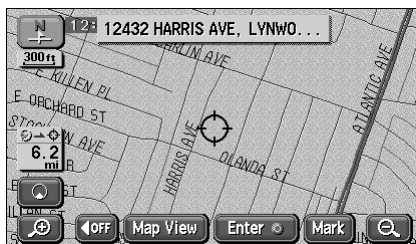

- Scrolling stopped



ATTENTION

- For safety reasons, the map can only be scrolled up to a predetermined distance while driving.
- The map orientation can be switched while driving.
 - * For a scrolled map, you can only switch from "Heading up" to "North up". (Switching from "North up" to "Heading up" impossible)
- Move the map with one-touch scroll and the map will freeze into position and will not move even if moving the present location. Press **NAVI** to return to the original status (moving map).

3. Map displays

Setting the Street Name display while scrolling


You can select between setting the Street Name display ON (display) or OFF (not display) while scrolling.

1 Touch **Setup** in the MENU screen.

2 Touch **On** or **Off** for Street Name on Scroll Map.

- The pressed touch switch will become green.

3 Touch **OK**.

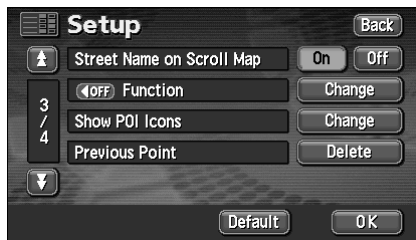



Switching the touch switch display

When a map is displayed, the number of touch switches displayed on the screen can be reduced.

Switching the touch switch display

1 Touch **OFF**.

- If the touch switches are not displayed, this operation cannot be performed via a touch switch. First display the touch switches onto the screen and then proceed.
- If the touch switches are not displayed, touch **ON** to make them appear on the screen.

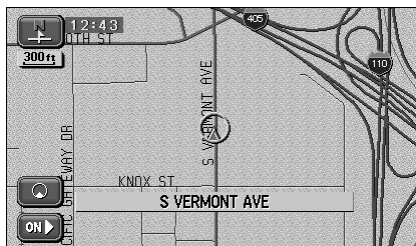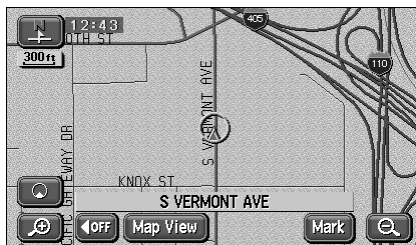


Touch **Default** in the Setup screen to return all items to the default settings.

Setting touch switches to display or not display

You can set the switches to be hidden on pressing the **◀ OFF** touch switch.

1 Touch **Setup** in the MENU screen.

2 Touch **Change** for **◀ OFF** Function.

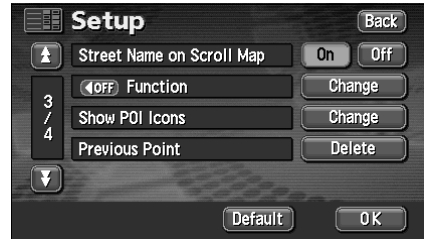

3 Touch the touch switches desired for non-display.

- Touch **◀ OFF** on the map screen and the touch switches selected here will not appear.

4 Touch **OK**.







- Touch **Default** on the switch display setting screen to return the switch display setting to default status.
- To display all the touch switches, touch those displayed in toned-down color.

◀ OFF or **ON ▶** are not displayed.

3. Map displays



Switching the map reduction scale






The map reduction scale (map range) can be switched to any desired setting from 40,960,000:1 to 5,000:1. Also, if the destination is set, you can switch to the reduction scale showing the entire route to the destination with one touch.


Touch switch	Reduction scale	Scale display	Touch switch	Reduction scale	Scale display
 	1/0.005 million	150ft	 	1/0.64 million	4mi
	1/0.01 million	300ft		1/1.28 million	8mi
	1/0.02 million	700ft		1/2.56 million	16mi
	1/0.04 million	0.25mi		1/5.12 million	30mi
	1/0.08 million	0.5mi		1/10.24 million	60mi
	1/0.16 million	1mi		1/20.48 million	130mi
	1/0.32 million	2mi		1/40.96 million	250mi

Switching to the desired reduction scale

1 To widen the map's range, touch


. To shrink it down, touch .

- Every time the touch switch is touched, the scale goes up/down one level at a time.
- After having touched  or , touch a number on the scale bar to switch to the reduction scale represented by that number.
- Touch continuously on  or  for at least 1 second to switch the scale with no increments (free zoom).
- The reduction scale switched to will be indicated with a yellow mark ().

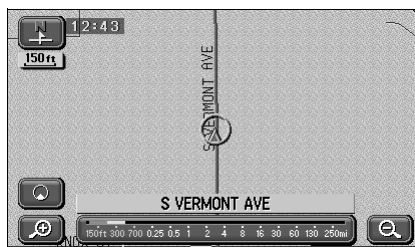

Scale bar



- The  switch will disappear when setting to the maximum range (250 mile scale diagram).
- For safety reasons, the scale cannot be free zoomed while driving.


Switching the map orientation

The orientation of the map being displayed can be switched.

- North up display 

The map appears with north pointing up at all times regardless of the vehicle's heading.


(The maps appearing in this manual are shown in north up display form.)

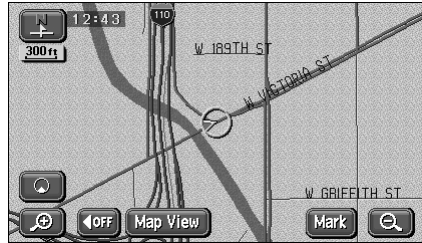

- North up display

- Heading up display  (indicates north)

The map appears with the heading of the vehicle pointing up at all times.

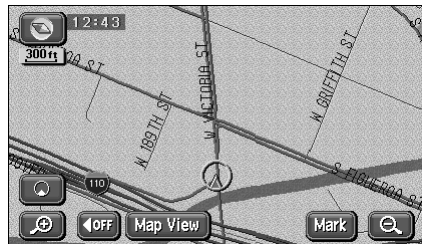


- Heading up display

Switching the map orientation

- 1 Touch  or .

- Switches between "North up" display and "Heading up" display.

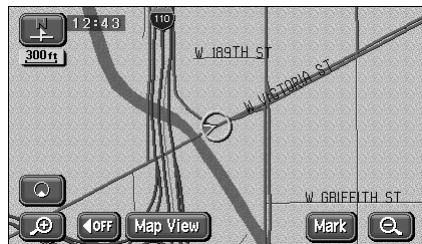

When in heading up display, maps retrieved by setting the destination and all-route display screens are shown with north up. However, when returning to the present location screen, the display will switch back to heading up.


3. Map displays


Switching to double screen display

When a map is displayed, the screen can be divided into two parts as shown below.


Ex.) Two maps can be displayed with; different reduction scale screens, North up and Heading up screens, POI display ON and OFF screens.

Switching to double screen display

1 Touch  when a map is displayed on the screen.


2 Touch .

- The screen on the left can be operated the same way as when only one screen is displayed.

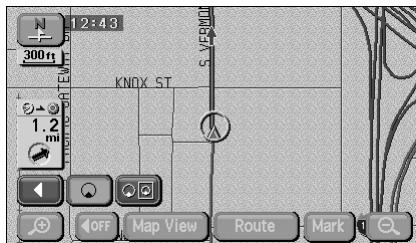

Operating the screen on the right



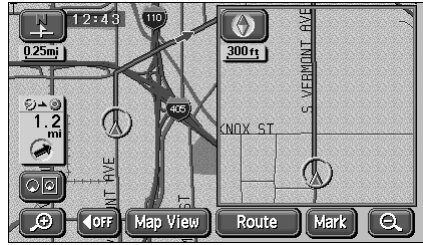

- 1 Touch the map shown in the screen on the right.




- 2 Touch any touch switch.

- When turned ON, the movement display light turns yellow.

- 3 Touch **Back**. Touch **Back** to return to the double screen map display.

- Touch  or  to switch the map reduction scale.
- Touch  or  to switch the map orientation.

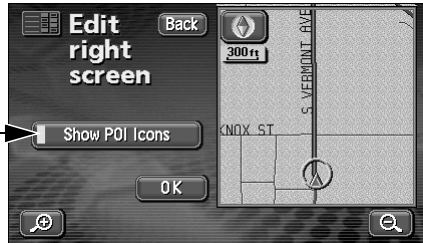

Movement display light



- When in double screen display, only the map appearing on the left screen can be moved with one-touch scroll.
- Maps retrieved by the destination setting screen or all-route display screen will appear as one screen. When returning to the present location screen, the double screen form will reappear.

3. Map displays

POI vicinity display

When a POI vicinity is displayed in the screen on the left, you can switch it either ON (display) or OFF (not display) to appear on the right screen.

Please refer to the POIs can be displayed on "POI display" on page 35.

■ Show POI Icons: ON


1 Touch **Show POI Icons**.

- The actuation right is lit and turns "Show POI Icons" to ON.

■ Show POI Icons: OFF

1 Touch **Show POI Icons** while the Actuation right is lit.

- The actuation right is off and turns "Show POI Icons" to OFF.

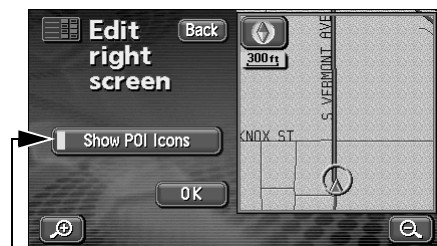

Movement display light

Canceling the double screen display

1 Touch when a map is displayed on the screen.

2 Touch .

- The pressed touch switch will become green and the monitor will return to single screen display.



- When a POI vicinity is displayed, the settings in the screen on the left and right are the same. However, POIs not displayed on the left screen cannot be shown on the right screen.
- If re-displaying the double screen, the reduction scale for the maps shown will be the same as the previous double screen display scales.

POI display

POI landmarks can be displayed on the map.





POI types

Restaurant	All Restaurants
	American
	Chinese
	Continental
	Fast Food
	French
	Italian
	Japanese
	Mexican
	Sea Food
	Thai
	Other Restaurants
Shopping	Convenience Store
	Department Store
	Grocery Store
	Home and Garden
	Pharmacy
	Shopping Mall
	Specialty Food Store
	Other Retail Stores
Automotive	Auto Club
	Car Wash
	Gas Station
	Parking
	Service & Maintenance
Other Automotive Stores	
Travel	Airport
	Bus Station
	Campground
	Ferry Terminal
	Hotel
	Rental Car Agency
	Rest Area
	Train Station
Recreation	Amusement Park
	Botanical/Zoological Gardens
	Casino
	Cinema
	Golf Course
Historical Monuments	

	Horse Racing
	Marina
	Museum
	National and State Parks
	Ski Resort
	Speedway
	Sports Complex
	Theater
	Tourist Attraction
	Tourist Information
	Video Rental
	Winery
Community	City Center
	Convention Center
	Court House
	Government Offices
	Higher Education
	Hospital
	Library
	Parks
	Police Station
	Post Office
School	
Banking	ATM
	Bank
Other	Other Financial Services
	Beauty and Barber Shops
	Coffee House
	Dry Cleaning
	Health and Fitness Club
Ice Cream Parlor	
Other Business Facilities	

3. Map displays



- Maps with a scale of 1 mile or greater detail can be displayed. (Excluding all route display screens.)
- POI landmarks can only be displayed within a 20 mile radius from the  or  mark. (Up to 200 landmarks.)
- Move the  or  mark to switch the POI landmark displays.

Display landmarks by a simple operation while driving

POI landmarks can be displayed by simple operations while driving.

- 1 Touch **Map View** if a map is displayed.
- 2 Touch **Show POI Icons**.
- 3 Touch the POI to be displayed
(**Gas Station**, **ATM**,
Restaurant, **Parks**,
Grocery Store, **Hotel**).
 - The POI landmark touched will appear.



Delete a POI landmark

- 1 Touch **Map View** if a map is displayed.
- 2 Touch **Show POI Icons**.
- 3 Touch **POI Off**.



3. Map displays

Displaying multiple types

Multiple POI landmarks (5 types) can be displayed simultaneously.

1 Touch **Map View** if a map is displayed.

2 Touch **Show POI Icons**.

3 Touch **More**.



4 Touch the POI name to be displayed.

- Up to 5 POI landmarks can be displayed simultaneously.
- If having made an error, touch **Delete** to cancel one POI landmark at a time.
- Touch an already selected POI to cancel that POI.








5 Touch **OK**.

6 Touch **Back**.

- The selected POI landmark is displayed.

Search for POI vicinity



Names of POIs close to the  or  mark on the map and their distance in a straight line from the  or  mark can be displayed. With , it is also possible to display a direction.

- 1 If POI landmarks are displayed on the map, touch **Map View**.
- 2 Touch **Show POI Icons**.
- 3 Touch **Local POI List**.

- A list of the selected POIs appears.



- 4 Touch the POI name to be displayed.

- A map with the selected POI in the center is displayed with the POI name and its distance in a straight line to the present location is displayed.
- If the  mark is displayed, POIs ahead of it are shown with a  mark (arrow pointing upwards). (Position viewable from the vehicle directional heading.)
- If a destination is set, a list of POIs along the route can be displayed. Refer to the Section "**Displaying a list of POIs along the set route**" on page 41.



3. Map displays



- Only landmarks within a 20 mile radius of the or mark can be searched for. (Up to 200 landmarks.)
- POI landmarks can be listed in the order of proximity to the or mark or by POI icon category.

● Distance order display



- Touch **Dist.** to change the listing order to proximity to the or mark.

● Category order display



- Touch **Icon** to change to a POI icon category listing order.

● Name order display




- Touch **Name** to change the name listing order.

Displaying a list of POIs along the set route

If a destination has been set, a list of POIs whose distance and direction correspond to the set route can be selected. (The distances shown represent distances left to travel to the POIs.)

1 Touch **On Route**.

- If a list displaying POIs along the set route is shown, the movement display light appears yellow.
- Touch the POI name to display a map with that POI in the center, its name and the distance to that POI from the present location.

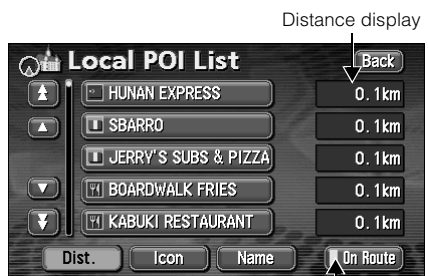

- Display of POIs along the set route


Displaying POI information

1 Touch a POI landmark displayed on the map.

- The name of the POI and the linear distance from the current location will be displayed.

2 If **Info.** is displayed, touch **Info.** to display a description of that POI.

- The data for the POI is displayed.

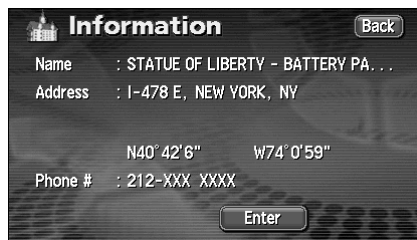

- If a route is not displayed on the map shown on the screen, a list of POIs along the set route cannot be displayed.
- There may not be a description available for some POIs.

3. Map displays

Setting the type of POI vicinity to be retrieved while driving


The 6 items appearing in the POI vicinity menu screen (**Gas Station**, **ATM**,

Restaurant, **Parks**, **Grocery Store**, **Hotel**) can be set at random.

This POI vicinity menu can be displayed even while driving and POI landmarks can be displayed on the map screen.

1 Touch **Setup** in the MENU screen.

2 Touch **Change** for Show POI Icons.

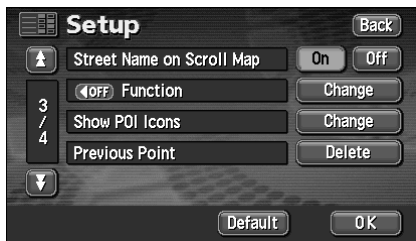

3 Touch the POI type to be changed.



4 Touch the POI type to be displayed.



5 Touch the name of the POI to be displayed.



6 Touch **OK**.




- Touch **Default** in screen **2** to return all items to their default settings.
- Touch **Default** in screen **3** to return the POI vicinity retrieved while driving to its default setting.

4. How to retrieve maps

When setting or adding a destination, registering your home, memory points, special memory points or detour memory points, maps corresponding to these setting and registration points can be retrieved using various methods.



For procedures on how to select a map retrieval method, see the corresponding page for each item below.

- When setting a destination



- **Setting a destination**
(Refer to page 64)
- **Add a destination** (Refer to page 75)



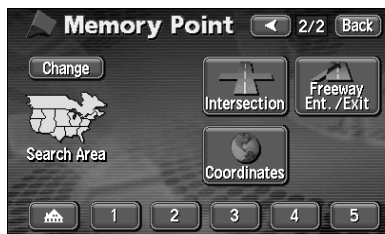








- When registering a memory point



- **Registering your home**
(Refer to page 101)
- **Registering memory points**
(Refer to page 105)
- **Registering special memory points**
(Refer to page 115)
- **Registering detour memory points**
(Refer to page 119)

The screens above are examples of screens when setting a destination and when registering a memory point.

Touch the map retrieval method on the displayed MENU screen to select an item.

Item (touch switch)	Function
	By entering an address, the map corresponding to that point (or area) can be displayed. (Refer to page 47)
	By entering the name of a POI, the map corresponding to that POI's vicinity of can be displayed. Also, enter the name of an address to display the map of that area. (Refer to page 49)
	The map displayed on the screen before having opened the MENU screen can be returned.
	Police stations, hospitals are displayed in the order of proximity to the present location. (Refer to page 55)
	The map of the vicinity of a memory point can be displayed. (Refer to page 55) [Only for when memory points are registered. For information concerning memory points, see page 100.]
	The map of the vicinity of a previously set destination or the previous start point can be displayed. (Refer to page 56) [Only for when an entry in the destination archive is registered. For information concerning the destination archive, see Page 123.]
	Intersections can be displayed by entering the names of two roads that cross each other. (Refer to page 56)
	A map can be displayed by indicating a freeway entrance/exit. (Refer to page 58)
	A map can be displayed by entering latitude and longitude coordinates. (Refer to page 59)
	[When setting a destination] A route search is started for a registered geographical point. [Only when each respective point is registered.] [When registering a memory point]
<p data-bbox="104 1193 434 1220">Vicinity of special memory point</p> <div data-bbox="174 1230 362 1294">  </div>	<p data-bbox="452 1193 983 1241">The map for a registered point can be displayed. [Only when each respective point is registered.]</p> <ul data-bbox="452 1246 885 1321" style="list-style-type: none"> • Registering your home (Refer to page 101) • Registering 1 to 5 special memory points (Refer to page 115)

4. How to retrieve maps

Changing the search area

This navigation system divides the U.S. and Canada into 11 block areas.

For any search method employed, the system will conduct a search in the area you are occupying unless the search area has been changed. To conduct a search in another area, first set the search area prior to beginning the search.

1 Touch **Change**.



2 Touch the area where a search is to be initiated.

- For a list of the areas, see the figure on the right.



3 Touch **OK**.

US1

Idaho
Oregon
Washington

US2

California
Nevada

US3

Arizona
Colorado
Montana
New Mexico
Utah
Wyoming

US4

Iowa
Kansas
Minnesota
Missouri
North Dakota
South Dakota

US5

Oklahoma
Texas

US6

Illinois
Indiana
Kentucky
Michigan
Ohio
Wisconsin

US7

Arkansas
Alabama
Louisiana
Mississippi
Tennessee

US8

Connecticut
Massachusetts
Maine
New Hampshire
New Jersey
New York
Rhode Island
Vermont

US9

Washington, D.C.
Delaware
Maryland
New Jersey
Pennsylvania
West Virginia

US10


Florida
Georgia
North Carolina
South Carolina

CAN

All provinces and regions in Canada included in this switch.

Retrieving a map using an address

If the address is known, its corresponding map can be retrieved by selecting that address.

- 1 Touch **Street** and enter one character at a time.
 - If having made a mistake, touch  to delete one character at a time.
 - Lettered touch switches with no corresponding search result will appear inverted. Input is not enabled even if touching them.



- 2 Touch **List**.
- 3 Touch the street name to be displayed.




- 4 Touch the city name to be displayed.



4. How to retrieve maps

5 Touch **House #** and enter one number at a time.

- If you make a mistake, touch  to delete one character at a time.



6 Touch **OK**.

- The map searched for by entering an address is displayed.
- If there is an address that corresponds with the entered house number, the map of the vicinity of that address will be displayed.
- If there is no address corresponding to the entered house number, a diagram of the vicinity of the corresponding street will appear.


Retrieving a map using a POI name

A map can be retrieved by entering a partial POI name or by narrowing down from a list of several POI types, regions, street or city names, etc. Also, a map can be retrieved by entering the name of an address.

When the number of candidates is low, a map can be selected directly from the list screen.

1 Enter the POI name (or address)

by touching one character at a time.

- Up to 24 characters can be entered.
- If having made a mistake, touch  to delete one character at a time.
- Lettered touch switches with no corresponding search result will appear inverted. Input is not enabled even if touching them.



2 Touch **List**.

- A POI list screen containing names searched for from the entered characters is displayed.

3 Touch the POI name to be displayed.

- Narrow down a long list of candidates using **City** and **Category** start a search after having eliminated items from the list.
- When indicating the area of the POI to be displayed in the POI list screen,

touch **City** and then touch **Nearest 5 cities** or **Input City name**. When indicating the POI type, touch **Category**.



If entering less than 4 search candidates, the list screen will automatically be displayed.

4. How to retrieve maps

If narrowing down candidates per area

When narrowing down candidates from the nearest 5 cities


- 1 Touch **City** on the list screen.
- 2 Touch **Nearest 5 cities**.
- 3 Touch the name of the city when the desired POI is located.
- 4 Touch the POI name to be displayed.

- Touch **Name** to return to screen **1** on "Retrieving a map using a POI name" (Page 49).
- Touch **Category** to indicate the type of POI to be displayed on the POI list screen. (Refer to page 52)



When narrowing down the list by entering a city name

- 1 Touch **City** on the POI list screen.
- 2 Touch **Input City name**.
- 3 Touch one character at a time to enter the city name.

- Up to 24 characters can be entered.
- If having made a mistake, touch  to delete one character at a time.
- Lettered touch switches with no corresponding search result will appear inverted. Input is not enabled even if touching them.
- Every time a character is touched, the number of POI names searched for is indicated.



4 Touch **List**.

- A POI list screen containing names searched for from the entered characters is displayed.

5 Touch the POI name to be displayed.

- Touch **Name** to return to screen **1** on "**Retrieving a map using a POI name**" (Page 49).
- Touch **Category** to indicate the type of POI to be displayed on the POI list screen. (Refer to page 52)

4. How to retrieve maps

When narrowing down the list by POI type

This is one way to narrow down the list of POI types. This is convenient when knowing what type of POI is the destination. Narrow down a long list of candidates using **City** and start a search after having eliminated items from the list.

1 Touch **Category** on the POI list screen.

2 Touch the POI type to be displayed.

- Touch **List All Categories** to show all the types of POI.



- POI type indication screen

3 Touch the POI name to be displayed.

- Touch **Name** to return to screen **1** on "Retrieving a map using a POI name" (Page 49).
- Touch **City** to indicate the POI area to be displayed on the POI list screen. (Refer to page 50)



- POI type selection is set for 1 type. After setting in **Category**, **City** can also be selected.
- If there is no corresponding POI for the set type, no list will appear. Set a different type.
- Depending on the POI, the displayed geographical point is not always the actual location of that POI but can be a representation of the address of that location.

POI types

Restaurant	All Restaurants	
	American	
	Chinese	
	Continental	
	Fast Food	
	French	
	Italian	
	Japanese	
	Mexican	
	Sea Food	
	Thai	
	Other Restaurants	
	Shopping	Convenience Store
		Department Store
Grocery Store		
Home and Garden		
Pharmacy		
Shopping Mall		
Specialty Food Store		
Other Retail Stores		
Automotive	Auto Club	
	Car Wash	
	Gas Station	
	Parking	
	Service & Maintenance	
Other Automotive Stores		
Travel	Airport	
	Bus Station	
	Campground	
	Ferry Terminal	
	Hotel	
	Rental Car Agency	
	Rest Area	
Train Station		
Recreation	Amusement Park	
	Botanical/Zoological Gardens	
	Casino	
	Cinema	
	Golf Course	
Historical Monuments		

	Horse Racing
	Marina
	Museum
	National and State Parks
	Ski Resort
	Speedway
	Sports Complex
	Theater
	Tourist Attraction
	Tourist Information
	Video Rental
Winery	
Community	City Center
	Convention Center
	Court House
	Government Offices
	Higher Education
	Hospital
	Library
	Parks
	Police Station
	Post Office
School	
Banking	ATM
	Bank
	Other Financial Services
Other	Beauty and Barber Shops
	Coffee House
	Dry Cleaning
	Health and Fitness Club
	Ice Cream Parlor
Other Business Facilities	

4. How to retrieve maps



- Depending on the POI, the displayed geographical point is not always the actual location of that POI. The following cases may result in a search based on data that differs from general publications.
- Facilities such as art museums in department stores and amusement parks may be located in areas that differ from their customer service centers.
- The address appearing in maps may contain the geographic name of a neighboring area. Also, the address may only appear in part or may be abbreviated.

Retrieving a map in the event of an emergency

In the event of a traffic accident, a problem with your vehicle or other emergency, a map for the nearest police station, hospital can be retrieved.

Switch to this mode and the address and longitudinal/latitudinal coordinates of the present location will be indicated on the upper part of the screen.


- 1 Touch **Police Station** or **Hospital**.

- While driving, the

Nearby Police Station or

Nearby Hospital will appear, and you will be able to call up a map for the nearest police station or hospital.

- 2 Touch the POI to be displayed from the list.

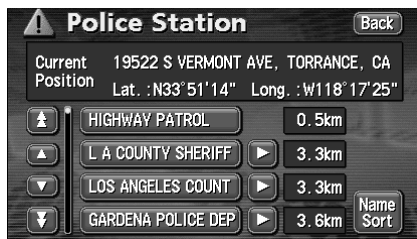

Retrieving a map using a memory point

If at least a few memory points are registered in the device in advance (Refer to page 105), a map can be retrieved using one of these points.

- 1 Touch the memory point to be displayed from the list.



4. How to retrieve maps


Retrieving a map using the archive

Up to 100 latest previously set destinations are automatically recorded and a map for the same point can be easily retrieved.

1 Touch the destination archive to be displayed from the list.

- By touching


Previous Start Point you can call up the previous start point.

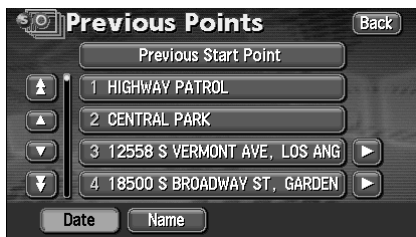


Retrieving a map using an intersection name

An intersection can be retrieved from 2 intersecting streets.

1 Enter the Street Name by touching on the characters on the screen one character at a time.

- Up to 24 characters can be entered.
- If having made a mistake, touch  to delete one character at a time.
- Lettered touch switches with no corresponding search result will appear inverted. Input is not enabled even if touching them.
- Every time a character is touched, the number of POI names searched for is indicated.
- Touch **List** to display a list of the applicable streets.

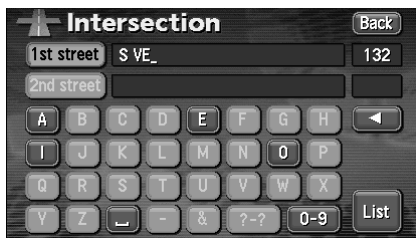


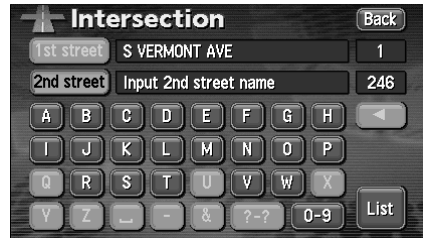
- Your home and special memory points are not recorded in the destination archive.
- Refer to the Section "**Deleting entries from the destination archive**" on page 123, for information concerning the deletion of entries in the destination archive.

2 Touch Street Name from the list.



3 Enter one more Street Name in the same manner.

- Up to 24 characters can be entered.
- If having made a mistake, touch  to delete one character at a time.
- Lettered touch switches with no corresponding search result will appear inverted. Input is not enabled even if touching them.
- Every time a character is touched, the number of POI names searched for is indicated.
- Touch **List** to display a list of the applicable streets.



4 Touch Street Name from the list.

- The map retrieved from the entered street names appears.




4. How to retrieve maps

Retrieving a map using a freeway exit/entrance name


A map can be retrieved using the name of a freeway or an exit/entrance.

1 Enter the freeway name by touching on the characters on the screen one character at a time.


- Up to 24 characters can be entered.
- If having made a mistake, touch  to delete one character at a time.
- Lettered touch switches with no corresponding search result will appear inverted. Input is not enabled even if touching them.
- Every time a character is touched, the number of POI names searched for is indicated.
- Touch **List** to display a list of the applicable freeways.



2 Touch the freeway name to be displayed.

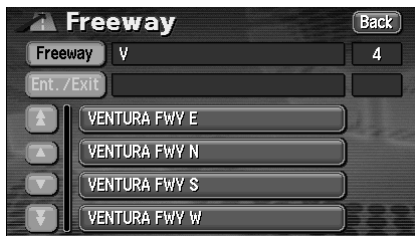


3 Touch either **Entrance** or **Exit** to specify the freeway entrance or exit.

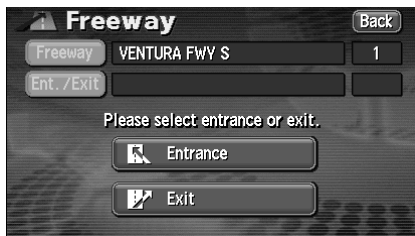

4 Touch the entrance or exit name to be displayed from the list.


- Touch **Input Name** to enter the entrance or exit name directly.
- Touch **Dist. Sort** to sort the entries in order of the distance from the present location.

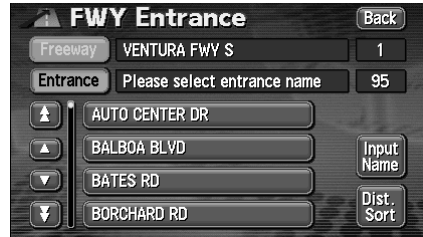

Retrieving a map using the latitude/longitude

A map can be retrieved using the latitude/longitude.

1 Enter the number by touching the switches on the screen one number at a time.

- If having made a mistake, touch  to delete one number at a time.



2 Touch **OK**.

- The map retrieved from the entered latitude and longitude appears.

5. Performing operations on a retrieved map

When retrieving a map, either a map with a pinpoint search result or without a pinpoint search result (vicinity) will be displayed. Information on POIs can be displayed from the map retrieved.


Performing operations on a displayed map

The following conditions are necessary to display a map from a pinpoint:

- ① When entering a POI name in "Retrieving a map using a POI name"
- ② When "Retrieving a map in the event of an emergency"
- ③ When "Retrieving a map using an intersection name"
- ④ When a corresponding POL is made available when "Retrieving a map using a freeway exit/entrance name"



- When a search is made using a pinpoint

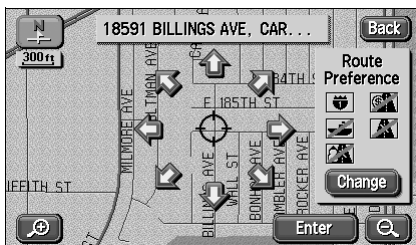

- When a search cannot be made using a pinpoint

The following operations are enabled on a retrieved map.

■ Changing the position

Scroll to change the position.

■ Displaying POI information

The POI data displayed as per the conditions described in steps ① to ④ above is shown.

Displaying POI information

1 Touch **Info.**

- Information on the POI is displayed




- Information on POIs can be displayed only when the method described in ① to ④ above was used to call up a map.
- There may be no information available for some POIs.

MEMO



1. Setting the destination and searching for a route

To search for a route to guide you to a destination, settings including a destination setting, additional destinations, and route search conditions are required.

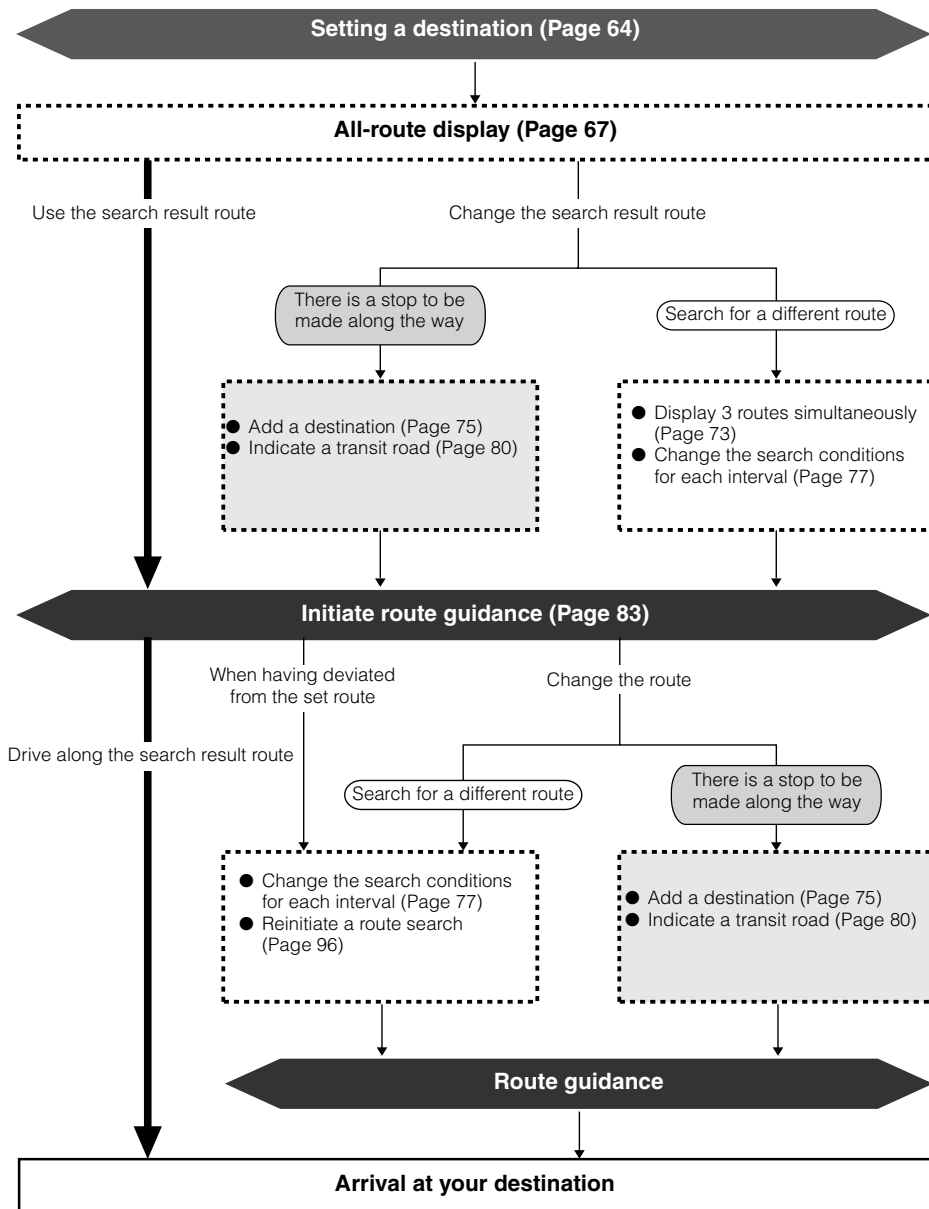

2. Set a destination and search for a route

Route guidance begins after setting your destination.

The destination is set as per the following methods:

- One-touch setting
- Set using a registered point (your home, special memory point)
- Set using the map retrieval method

Item	Setting method
One-touch setting	Scroll the map and touch Enter to set the destination.
Set from a registered point	Set your home as the destination only if your home is registered. This cannot be used if your home is not registered. (Refer to "Registering your home" (Page 101).)
	Set an already registered special memory point (up to 5 points) as the destination. This cannot be used if there are no special memory points registered. (Refer to "Registering a special memory point" (Page 115).)
Set using a map retrieval method	Search using a map retrieval method to set a destination. (Refer to "How to retrieve maps" (Page 44).)

Set the destination to automatically start a recommended route search.

When adding a destination or a route other than the recommended route or setting a transit road, proceed after the route search is complete.



- When setting the destination, use a detailed map with a reduction scale of under 0.5 miles.
- Geographical points on maps representing set destinations are automatically registered (up to 100 points) and can be used to retrieve a map when setting a destination. When exceeding 100 points, the oldest entry is deleted every time a new one is entered. Unnecessary points can be deleted. (Refer to **"Deleting entries from the destination archive"** (Page 123).)

2. Set a destination and search for a route


Setting a destination

One-touch setting




A destination can be set in the map presently displayed.


1 Touch the map.

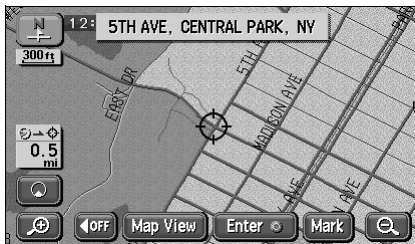2 Touch **Enter**.




3 Touch **Enter**.

- Touch  to move the map.
- A  symbol will appear for the  destination point on the position and a route search will begin.

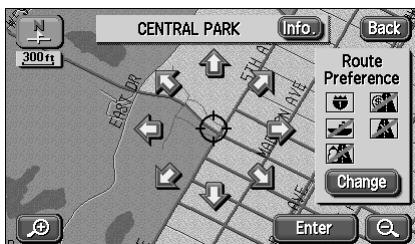


- If a destination is already set, touch **Replace** to delete the set destination and set a new one.
- Touch **Add to** to add a destination. It will be added as the next destination after the present location.

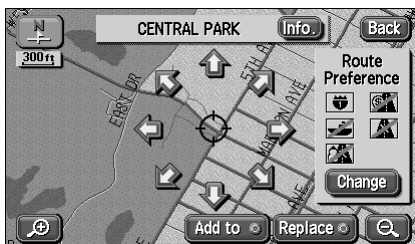

If a map with a reduction scale wider than 0.5 miles is displayed, switch to a 0.5 mile reduction scale.

Set from a registered point

- 1 Press **DEST**.
- 2 Touch  or special memory points **1** to **5**.

- The symbol  will be displayed at the location of your home or the special memory point and the route search will begin.
- If a destination is already set, touch **Replace** to delete the set destination and set a new one.
- Touch **Add to** to add a destination. "Adding a destination" (Page 75) (Refer to **5** to **6**.)




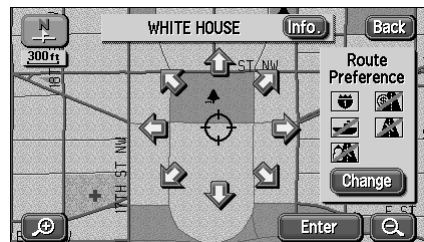
Set using the map retrieval method

- 1 Press **DEST**.
- 2 Select the map retrieval method and the map corresponding to the point to be set as the destination will appear.

- See pages 44 and 60, "How to retrieve maps" and "Performing operations on a displayed map".


- 3 Touch **Enter**.

- A  symbol will appear for the destination point on the position and a route search will begin.



2. Set a destination and search for a route

- If a destination is already set, touch **Replace** to delete the set destination and set a new one.
- Touch **Add to** to add a destination. "**Adding a destination**" (Page 75) (Refer to **5** to **6**.)

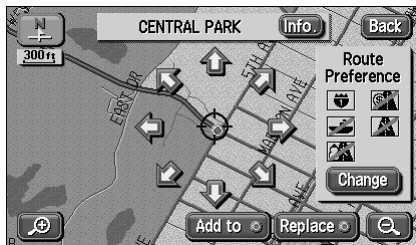

Route search

Set a destination and a route search will automatically start.

- A route search will continue even if switching to other screens.
- The route will not appear if the distance to the destination is too short.
- When a route search is complete, an all-route display (all routes from the present location to the destination) screen will appear.



If the destination is on a freeway or in an inaccessible area, the following screen will appear. Touch the item corresponding to the situation.

- Touch **Yes** to set the destination on the highway.
- Touch **No** to set the destination on another road.



If the destination is inaccessible or if there is a river, railroad or other obstruction in its vicinity, the following screen may be displayed.

- Touch **No** to set that point as the destination.
- Touch **Yes** to move the destination.



If a route search is conducted on a freeway or toll road interchange (IC), the search result route may start from a nearby local road. In such a case, reinitiate a route search (Refer to page 96).

All-route display

When the route search is complete, an all-route display screen appears.

- Press **NAVI** after the all-route appears, or do not operate the device for at least 3 seconds after you start driving, and route guidance will automatically begin.

Route displays

The routes will be displayed in the following colors.

- **Blue**

The route when only one destination is set or the present segment up to the first destination set in case of multiple destinations appears blue.

- **Light blue**

The traffic regulation data in the segment is not corresponded on the map disc. The route guidance with voice and screen display such as intersection guidance is not supported.

- **Purple**

All segments other than the present segment up to the next destination when multiple destinations are set.

- **Orange**

Display seasonally restricted segment (Refer to page 70)




- Route search complete screen (all-route)

2. Set a destination and search for a route

All-route display and touch switches

On the all-route screen, routes from the present location to the destination, the estimated arrival time and distance are indicated.

Also, the search result routes can be changed and the guidance data can be displayed.

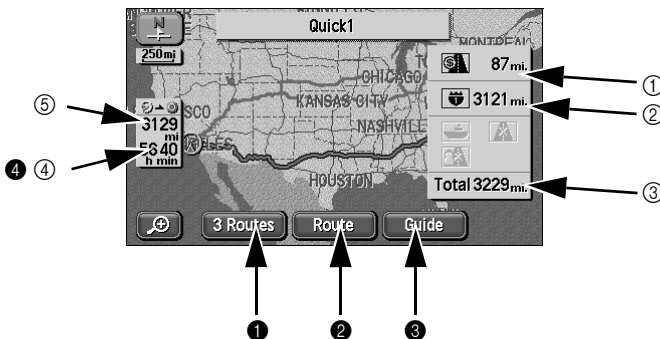

■ Items displayed

Data up to the final destination is displayed.

① Distance on toll roads

The distance on all toll roads is displayed.

② Distance on freeways

The distance on all freeways is displayed.

③ Distance

The total distance on all roads including toll roads, freeways, local streets to the destination (when multiple destinations are set, the final destination) are displayed.

④ Required time

The required time up to the destination is indicated.

⑤ Distance remaining

The distance to the destination for the route presently taken are displayed. (If deviating from the road after route guidance has started, the distance to the destination in a straight line is indicated.)

■ Touch switches

The following operations are enabled using the touch switches appearing on the all-route display screen.

① 3 Routes

Different routes are displayed to enable a selection. (Refer to page 73)

② Route

The route change screen is shown to enable the modification of the search conditions. Also, indicating an additional transit route to the destination is possible. (Refer to pages 75, 77 and 80.)

③ Guide

Route guidance can be initiated.

(Refer to page 83) After route guidance is started, the display returns to the present location screen.

④ When two or more destinations are set, you can switch the display of the required time / remaining distance to each of the destinations by touching the remaining distance display. (Refer to page 94)

If deviating from the road after route guidance has started, the distance to the destination in a straight line is indicated.



- The search result route is a reference route to the vicinity of the destination. In no way is it the shortest, fastest or least congested route.
- The required time is calculated from the average vehicle speed (Refer to page 88) and may have a slight deviation depending on the driving conditions.
- In the following situations, 3 routes cannot be displayed.
 - When 2 or more destinations are set
 - When a transit road is indicated
 - After route guidance has started
- An all-route diagram can be displayed even after route guidance has started. (Refer to page 93)

2. Set a destination and search for a route

Display or bypass a restricted segment

Bypassing a restricted segment

Bypass using the all-route display screen

1 Touch **Route** in the all route display screen.

2 Touch **Route Preference**.

3 Touch **Allow Season Restricted Road**.

- If searching for a route that passes through a restricted segment, an indicator will light up.

4 Touch **OK** to start the route search.



Bypass using the present location screen

1 Touch **Route** if a map is displayed.

1 Touch **Route Preference**.

2 Touch **Allow Season Restricted Road**.

- If searching for a route that passes through a restricted segment, an indicator will light up.

3 Touch **OK** to start the route search.



How to display message on a restricted segment


The message appearing if a search result route has a restricted segment can be turned ON (display) or OFF (not display).

1 Touch **Setup** in the MENU screen.

2 Touch either **On** or **Off** for Notify Traffic Restriction.

- The pressed touch switch will become green.

3 Touch **OK**.

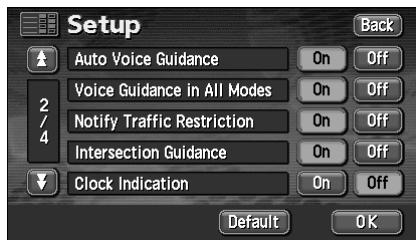

Touch **Default** in the SETUP screen to return all items to their default settings.

2. Set a destination and search for a route

Display route data (guided road information)

The divided route data to the destination by its entrances/exits of interchanges (IC), transit roads, national roads or local streets can be displayed. The map at the departure or destination area can also be displayed.

1 Touch **Map View** in the present location screen.



2 Touch **Route Overview**.


3 Touch **Turn List**.

- Route data is divided at entrances/exits of interchanges (IC), junctions (JCT) and at the turning points of each destination, transit and other roads.
- The road name and distance appear for each piece of divided route data.

4 Touch **Map**.

- Maps for the various set points are displayed.

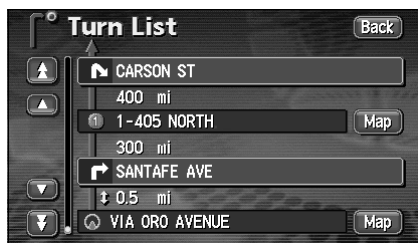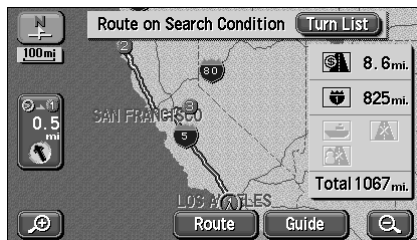

- If the present location is on the route, the  vehicle position mark will appear in the route data screen.
- If the present location is not on the route (if having deviated from the route), data will be displayed from the point the route is displayed.

3-route simultaneous display (3-route search function)

Set the destination and a recommended route will be searched for resulting in an all-route display from the present location to the destination. Other than the recommended route ("Quick 1"), "Quick 2" and "Short" routes will also be displayed to enable a selection.

1 Touch **3 Routes** on the all-route display screen to start the route guidance.


- 3 routes will be displayed in different colors along with the distance and required time.

2 Touch the route name.

- The selected route is displayed and the all-route display screen is shown.



- Touching **Info.** displays the information for the three routes.

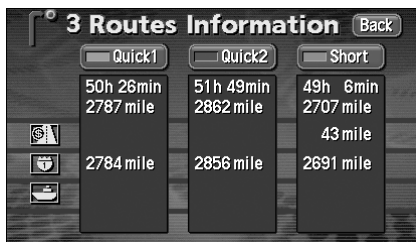

- In the following situations, 3 routes will not appear simultaneously.
 - When 2 or more destinations are set
 - When transit points (transit roads) are indicated
 - After route guidance has started
- Refer to the Section "**Reinitiating a route search**" on page 96, for the characteristics of each of the 3 routes.
- The required time is calculated from the average vehicle speed (Refer to page 88) and may have a slight deviation depending on the driving conditions.

3. Changing the search result route

After a route search is complete, the route can be changed by adding a destination or transit road. The following are methods for changing the route.

- Touch **Route** on the all-route display screen or the present location screen (during route guidance) to display the route modification screen.


The route modification method is set on the route modification screen.

- All-route display screen



Route

- Present location screen

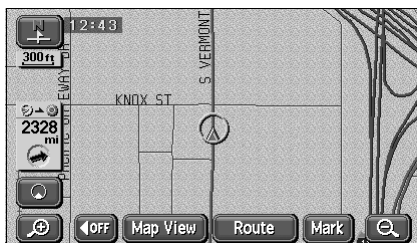

Route



- Route modification screen

- Add a destination..... Page 75
- Change the search conditions per segment Page 77
- Switch the order of destinations Page 78
- Delete a destination Page 79
- Indicate a transit road..... Page 80
- Cancel the transit road indication..... Page 81



The operations described here cannot be performed if a destination is not set.

Adding a destination

After having set a destination, up to five more destinations can be added.

In the following situations, set an additional destination.

- When setting a transit point between the present location and set destination
- When changing the set destination into a transit point and setting a new destination

Using the same method as setting a destination, touch **Add to** to add a destination. (Refer to **"One-touch setting"** (Page 64), **"Set from a registered point"** (Page 65) and **"Set using the map retrieval method"** (Page 65).)

1 Touch **Route**.

2 Touch **Add** for Destination.



3 Select the map retrieval method and display the map on which a destination is to be set.



- See pages 44 and 60, **"How to retrieve maps"** and **"Performing operations on a displayed map"**.




- The destination can be set on a map with a scale of 1 mile or greater detail.
- Geographical points on maps representing set destinations are automatically registered (up to 100 points) and can be used to retrieve a map when setting a destination. When exceeding 100 points, the oldest entry is deleted every time a new one is entered. Unnecessary points can be deleted. (Refer to the Section **"Deleting entries from the destination archive"** on page 123.)
- When adding a destination with a transit road (see pages 80 and 81) indicated, that transit road indication may be canceled depending on that geographical point.
- When 2 or more destinations are set, **Reorder** appears.


3. Changing the search result route

4 Touch **Enter**.

- A destination point in the form of the  symbol will appear in the  position.
- Up to a maximum of 5 destinations can be set.
- When 5 destinations are already set, delete a destination and proceed. (For information concerning deletion of a destination, refer to "**Deleting a destination**" on page 79.)

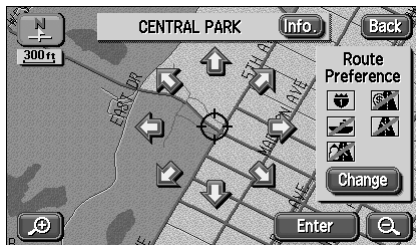

5 Touch **Add** in the segment to be set.

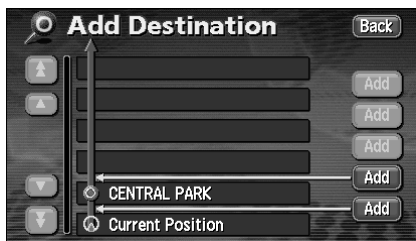

6 When a transit road is indicated, a cancellation screen may appear.

- Touch **Yes** to cancel the transit road indication and initiate a route search.
- Touch **No** to set the destination without canceling the indication.



- After having set the destination, the following operations are enabled from this screen:

Change the search conditions per segment (Page 77)

Switch the order of destinations (Page 78)

Delete a destination (Page 79)

Indicate a transit road (Page 80)

Cancel the transit road indication (Page 81)

- When adding more destinations, touch **Add** and the screen in step **3** on page 75 will appear. Repeat steps **3** to **6**.



Change the search conditions for each interval

The search conditions per segment can be changed and a search reinitiated.

- 1 Touch **Search Condition** in the route modification screen.



- 2 Touch the search conditions (for each route) per individual segment.

- 3 Touch **OK**.

- The route search is started.



For search condition characteristics, refer to **"Reinitiating a route search"** on page 96.

3. Changing the search result route


Switching the destination order

The setting order of multiple destinations can be switched and a search reinitiated.

1 Touch **Route**.

2 Touch **Reorder**.

- When transit roads are indicated, a confirmation screen allowing you to cancel and reorder destinations is displayed.
- Touch **Yes** to cancel and reorder.
- Touch **No** to abort reordering and return to the original screen.

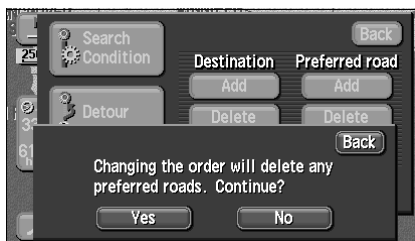

3 Touch the name of the destinations in order starting with the next destination.

- A new order will appear on the right of the selected destination names.
- If having made a mistake, touch **Cancel** to cancel the destination name order selected.



4 Touch **OK**.

- When the new destination name order is determined, the route modification screen will appear automatically after about 3 seconds without having to touch **OK**.
- Without touching all the destination names, touch only the destination you want to change the order of and touch **OK**. That selection will move to the top of the destination order.



If changing the destination order with a transit road indicated (Refer to page 80), that transit road indication may be canceled.

Deleting a destination

Multiple set destinations can be deleted. It is also possible to delete all the destinations at the same time.

1 Touch **Route**.

2 Touch **Delete** for Destination.

- If only one destination is set, the screen in **4** will appear.

3 Touch the destination name to be canceled.

- Touch **Delete All** to delete all the destinations.

4 Touch **Yes**.

- Touch **No** to return to the original screen.
- When all destinations are deleted and only one point is set, the present location screen appears.

5 Touch **OK**.

- A route search is started and the all-route display screen appears.



When all destinations are deleted, route guidance cannot be restarted. Setting a destination is necessary to activate route guidance.

3. Changing the search result route

Indicating a transit road

- 1 Touch **Route**.
- 2 Touch **Add** for Preferred Road.




- 3 The map will move to the position of the indicated transit road.


- 4 Touch **Enter**.



- 5 To indicate the road displayed, touch **OK**.


- 6 To specify another road, touch **Next**.

- Transit roads are marked .
- If only one destination is set and there are no interchanges or transit roads indicated, the screen in **7** will appear.

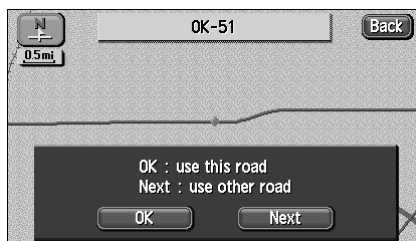

- **Delete** will appear if there is a transit road already indicated.
- If a map with a reduction scale wider than 0.5 mi is displayed, switch to a 0.5 mi reduction scale.

- 7** If 2 or more destinations are set or if a transit road is indicated, touch **Add** in the segment to be indicated.

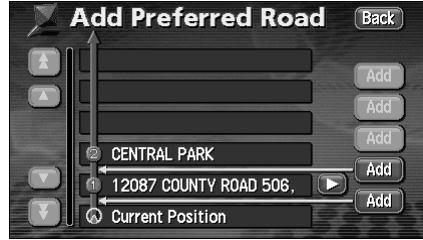


- 8** The route search is started.



Canceling a transit road indication

- 1** Touch **Route**.
- 2** Touch **Delete** for Preferred Road.
- If only one destination is set, the screen in **4** will appear.



- 3** Touch the road name to be canceled.
- Indicated transit roads appear with a  symbol.
 - Touch **Delete All** to cancel all transit roads.



3. Changing the search result route

4 Touch **Yes**.

- Touch **No** to return to the original screen.



5 Touch **OK**.

- The route search is started.



4. Starting, pausing and restarting route guidance

Starting route guidance

When the route search is complete, the all-route display screen appears. Touch **Guide** on the all-route display screen to start the route guidance. Route guidance can be paused and restarted.

1 Touch **Guide** on the all-route display screen.

- Route guidance is started.
- Press **NAVI** after the all-route appears, or do not operate the device for at least 3 seconds after you start driving, and route guidance will automatically begin.



Pausing and restarting route guidance

1 Touch **Suspend Guidance** in the MENU screen.

- Destinations will not be deleted even if pausing route guidance.
- To restart route guidance, touch **Resume Guidance** on the menu screen again.



5. Route guidance

When the route search is complete, guidance for the desired route can be started.


Drive towards your destination and the device will guide you along the route all the way to that destination.

Intersection guidance

When approaching an intersection with a guidance point displayed on the present location screen (if the present location is located on the route) while route guidance is in progress, intersection guidance and voice guidance is performed. Also, when approaching a junction (within about a mile), an enlarged intersection display screen will automatically appear.


A non-junction intersection

Distance to the next intersection where a turning is to be made and the turning direction

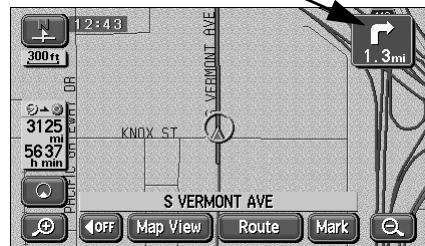

A junction intersection (enlarged guidance screen for an intersection)

- ① **Intersection name display**
Names of transit points or junction intersections appear.
- ② **Remaining distance display**
The distance up to the intersection is indicated.

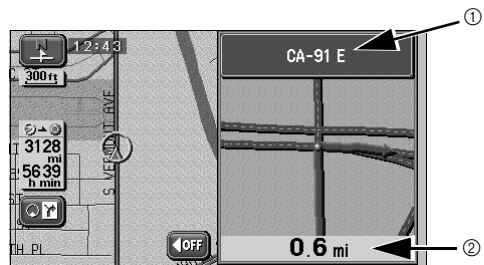



- Enlarged intersection screens only appear if **On** is set for automatic enlarged intersection screen display. (Refer to page 86)
- Lane displays and names will not appear for intersections about which there is no data in the map disk.
- The intersection name indicated may differ from the actual intersection.
- In the following situations, intersection guidance is not performed:
 - Immediately after route guidance is started
 - In the vicinity of the destination
- Intersection guidance may be early or late.
- When approaching a junction intersection, an enlarged intersection display screen will appear.
- When an enlarged intersection display screen is displayed, the intersection name will be displayed for the junction intersection. There is no intersection guidance prior to junction intersections.
- Immediately before a turn is to be made, a chime will sound. However, the chime will not sound if the volume is set to **Off**.

5. Route guidance

Set automatic display of the intersection guidance screen

Select either to have the intersection guidance screen turned ON (display) or OFF (not display).

1 Touch **Setup** in the MENU screen.

2 Touch **On** or **Off** for Intersection Guidance.

- The pressed touch switch will become green.

3 Touch **OK**.




Set the intersection guidance screen

Cancel using **OFF**


1 Touch **OFF**.

- Press **NAVI** to redisplay the intersection guidance screen.

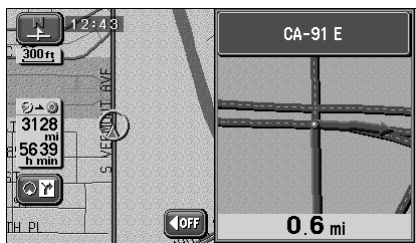



Cancel using

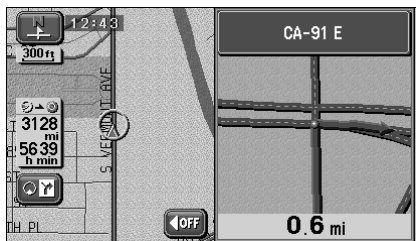
1 Touch .



Touch **Default** in the SETUP screen to return all items to their default settings.

2 Touch  to display the normal map.


- Touch  again on the screen to display the intersection guidance screen.

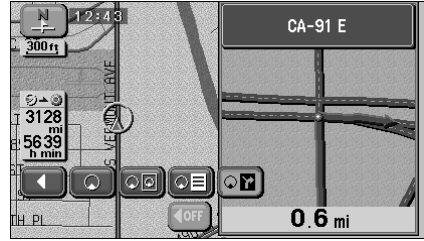

Ferry crossing guidance


Ferry crossings are shown with a dotted line.

- Voice guidance occurs up to the ferry terminal.
- After having finished the ferry crossing, start driving and route guidance will resume in a moment.

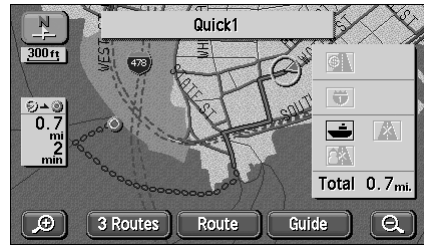

Setting the required time display

The required time can be indicated on the left of the map appearing on the present location screen (if the present location is on the set route) while route guidance is in progress.

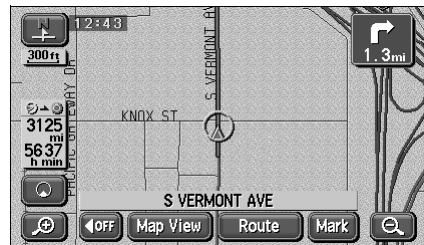

- Required time display



The required time include the ferry ride hours.


5. Route guidance

Setting the average speed

The following times are calculated based on the set average vehicle speed.

- Required time on the present location screen (Page 14)
- All route display screen required time (Page 67)
- Required times for the segments list (simultaneous 3 route display) (Page 73)

1 Touch **Setup** in the MENU screen.

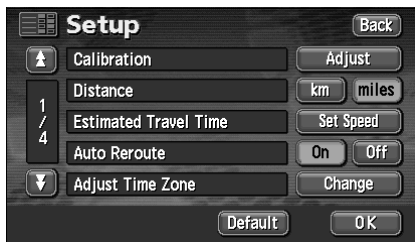


2 Touch **Set Speed** for the Estimated Travel Time.


3 Set the speed for each road.

- Touch **▶** to raise the speed, touch **◀** to lower it. (Each press raises or lowers 5 mph.)

4 Touch **OK**.

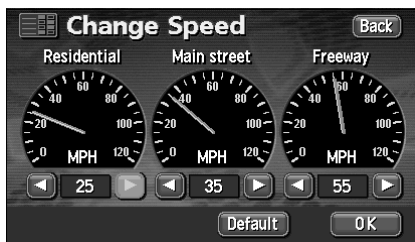

ATTENTION

- The required time is calculated from the average vehicle speed and may have a slight deviation depending on the driving conditions.
- When deviating from the set route, the  destination direction mark will appear.
- When reaching the maximum speed (75 mph freeway, 55 mph main streets, 25 mph residential), the **▶** switch inverts. When reaching the minimum speed (5 mph), the **◀** switch inverts. These switches cannot be operated even if touched.
- Touch **Default** on the Change Speed screen to return to its default settings (Freeway;55 mph / Main street; 35 mph / Residential; 25 mph).

Highway junction guidance


When driving on a highway with the present location screen displayed (if the present location is on the set route) while route guidance is in progress and a junction point approaches [interchange exits/entrances (IC), junctions (JCT)], the highway junction guidance screen will appear.

① Junction point name display

The interchange exit/entrance name (IC) or the junction (JCT) direction name is displayed.

② Remaining distance display


The distance up to the junction point is displayed. The distance decreases as you approach the junction point.

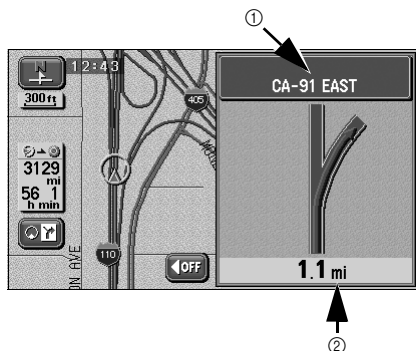

Canceling the highway junction guidance screen

1 Touch **OFF**.


- Press **NAVI** to redisplay the highway junction guidance screen.

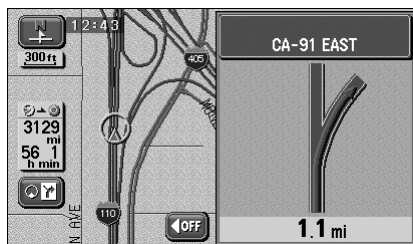



- No highway junction guidance display will occur for junction points that do not have corresponding data in the map data. Also, the junction point name may not be displayed even if the highway junction guidance screen is displayed.
- The junction point name displayed may differ from the actual junction name.
- In the following situations, highway junction guidance is not performed:
 - Immediately after route guidance starts
 - In the vicinity of the destination
- The highway junction guidance screen may be early or late.
- When approaching the next junction point, the highway junction guidance screen will continue to be displayed.


5. Route guidance

Switching the highway junction guidance screen


1 Touch .

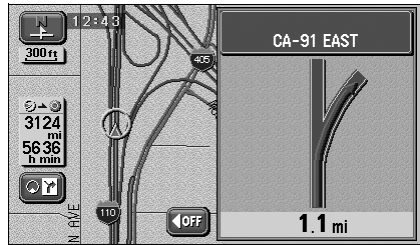

2 To display the regular screen touch .

To display the turn list, touch .

- To redisplay the highway pattern screen, touch  and .

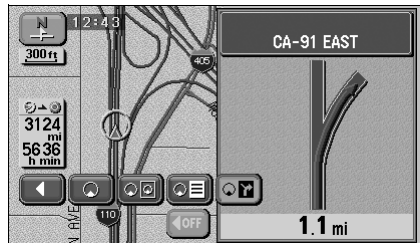

Voice guidance

If approaching an intersection, junction point, transit point, interchange (ramp) exit/entrance, junction (JCT) or destination while route guidance is in progress, a voice will announce the remaining distance to those points and up to 10 turning directions (straight, right, left, slight right, slight left, sharp right, sharp left, make a legal u-turn, keep right, keep left). Voice guidance is performed in PCM voice (human voice).

- 1 Press **NAVI** to activate voice guidance as per the distance up to the junction intersection.

[Example of voice guidance while route guidance is in progress]

- **Intersection voice guidance** (just guidance)

While route guidance is in progress, a chime will sound prior to a junction point.

- ◆ Example of voice guidance:
In ○○ miles (km), ○○ turn


- **Highway junction voice guidance**

While driving on a highway, junctions are shown as an enlarged display and the direction is announced vocally.

- ◆ Example of voice guidance:
In ○○ miles (km), the exit ○○

[Example of voice guidance in the vicinity of the destination while route guidance is in progress]

- ◆ Example of voice guidance:
You have arrived at your destination.
Your route guidance is now finished.

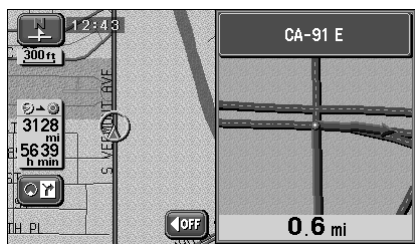

In six tenths of a mile,
right turn.



- Use the voice guidance only as a reference.
- After a voice guidance such as "Left turn in about 0.4 miles", drive for a moment and press **NAVI** to change the announcement as per the approaching distance (ex.: Left turn in about 0.5 miles, etc.)
- The intersection voice guidance is activated by turning **On** the Auto Voice Guidance. (Refer to page 92)

5. Route guidance

Setting the auto voice guidance


The auto voice guidance can be turned ON (announced) or OFF (not announced).

1 Touch **Setup** in the MENU screen.

2 Touch **On** or **Off** for Auto Voice Guidance.

- The pressed touch switch will become green.

3 Touch **OK**.

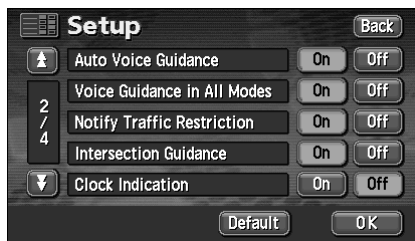

- The voice guidance examples mentioned above are the most common to be announced and may differ depending on the way the roads along your route are connected.
- If your vehicle position is not precisely specified, voice guidance may not occur or, in some cases, may be delayed or announce an erroneous instruction.
- The voice guidance volume may be adjusted (Refer to page 25). However, selecting **Off** will disable voice guidance.
- Touch **Default** in the SETUP screen to return all items to their default settings.

6. Performing operations on the guided route

Guidance in another mode

The route guidance continues (no vocal guidance output) even if switching to another mode (showing a screen other than the navigation screen). The voice guidance can be made to output even if switching to another mode.

Setting the guidance when in another mode

1 Touch **Setup** in the MENU screen.

2 Touch **On** or **Off** for Voice Guidance in All Modes.

- The pressed touch switch will become green.

3 Touch **OK**.



Redisplaying the all-route display

The all-route display from the departure point to the destination can be shown.

1 Touch **Map View** if a map is displayed.

2 Touch **Route Overview**.

- The all-route display screen appears.
- For details pertaining to the all-route display screen, refer to "**All-route display and touch switches**" on page 68.
- Touch **Back** to display the present location screen.



Touch **Default** in the SETUP screen to return all items to their default settings.


6. Performing operations on the guided route

Switching the required time/distance remaining display

If 2 or more destinations are set on the present location screen (if the present location is along the set route) while route guidance is in progress, the required time/ distance remaining can be switched.

1 Touch the required time/distance remaining.

- If 2 or more destinations are set, the required time/distance remaining for each destination appears.
- Switching is impossible if having deviated from the set route.

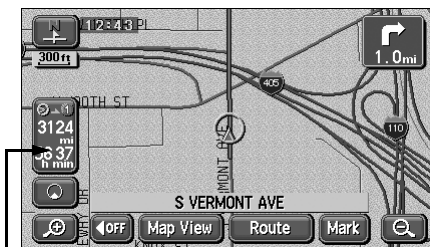

Required time/distance remaining

2 Touch the distance remaining display up to the destination desired.




On-route scroll

The map can be moved automatically along the set route to the destination or to the departure point on the screen showing the guided route.

Start on-route scroll


1 Touch **Route Preview** on the display modification screen.

2 Touch the scroll touch switches

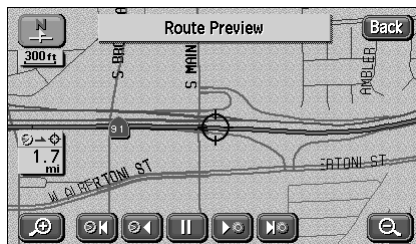

On-route scroll screen operations

- Touch **||** to pause map scrolling.
- Press **NAVI** to stop the on-route scroll.
- Touch **▶▶** or **◀◀** to move the map quickly.

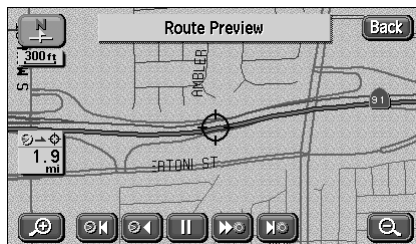

- If there is no route displayed on the map, on-route scroll is impossible.
- Using on-route scrolling during a double screen display will cause a reversion to single screen display. Press **NAVI** to return to double screen display.
- If scrolling up to the next destination:
 - Use the **▶▶** switch to move the map up to the next destination.
 - Use the **◀◀** switch to move the map back to the departure point (previous destination).
 - Use the **▶▶** switch to display the next destination map.
 - Use the **◀◀** switch to display the departure point map (previous destination).
- The on-route scroll may stop depending on the map displayed.

7. Reinitiating a route search


Reinitiating a route search

While route guidance is in progress, additional destinations can be set, search conditions can be changed and a route search can be reinitiated.

To change the route, use either the "Change method using **Route**" or the "Change method using **DEST**".

A route search can be reinitiated from the following screens.

- See the next page for information concerning the touch switches appearing on each screen.

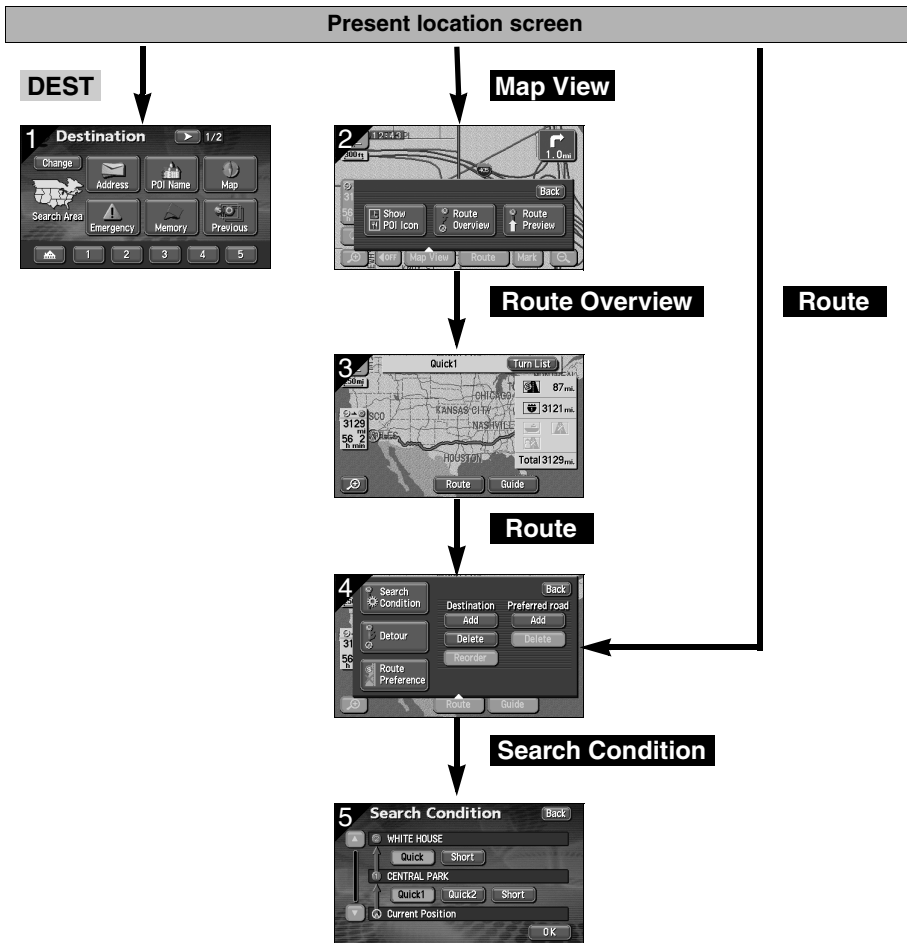

Screen No.	Touch switch	Function	Page
1	Map retrieval method	Retrieves the destination map Sets/ adds a destination	44
2	Route Overview	Shows the all-route display	67
3	Route	Displays the search condition setting screen	74
4	Destination, Transit destination Add , Delete , Reorder	Adds, switches the order or deletes destinations	75 78 79
	Transit point (transit road indication) Add , Delete	Indicates, corrects or deletes transit roads	80 81
	Search Condition	Displays the route modification screen	77
	Detour	Detour from the existing route ahead.	-
	Route Preference	Permits you to specify whether freeways, toll roads and other road categories are used or not.	98
5	Search conditions	Sets the search conditions for each segment	77

Search conditions	Function
Quick 1	A common route from the present location to the next destination* is searched for.
Quick 2	A route prioritizing toll roads from the present location to the next destination* is searched for.
Short	A route with the shortest distance from the present location to the next destination* is searched for.

* When a transit road is indicated between the present location and the next destination, a route is searched for between the present location and the indicated transit road.

7. Reinitiating a route search

Reinitiating a route search

- 1 Touch **Route** on the present location screen while route guidance is in progress.
- 2 Touch **Route Preference**.
- 3 Touch the item for which a search is to be reinitiated.
 - A route search is reinitiated.



- Because of the shape of the road, a route search may not be reinitiated and the same route may result from the reinitialized search due to a change in the search conditions.
- If having deviated far from the set route, a route to return you to the original route is not searched for. Rather, a new route search for the set destination (interchange, transit road) is initiated.
- If driving under an elevated road or along parallel local roads and a route search is initiated, the search result route may take you along elevated toll roads and parallel toll roads.

Automatic reroute search

If having deviated from the road, a route search may be initiated automatically (vicinity search or all-route search).

The search result route may differ as per the conditions under which the set route was deviated.

- Vicinity search: a route search returning you to the original route is initiated
- All-route search: a route search is initiated under selected conditions between the present location to the destination*

* When a transit road is indicated between the present location and the next destination, a route is searched for between the present location and the indicated transit road.

Setting the automatic reroute search

The automatic reroute search function can be turned ON (enable) or OFF (disable).

1 Touch **Setup** in the MENU screen.

2 Touch **On** or **Off** for Auto Reroute.

- The pressed touch switch will become green.

3 Touch **OK**.



- If having deviated from the set route while route guidance is in progress, the automatic reroute search is activated when the device determines that you are driving on a guidable road.
- Touch **Default** in the SETUP screen to return all items to their default settings.

1. What is point registration

Up to 106 geographical points - categorized as "home," memory points or special memory points - can be stored on a map by registering them as memory points. There can be one "home" and up to five special memory points. Registering detour memory points (maximum of ten) also ensures that detours will be made through these points when route searches are performed.

Memory points can be registered by selecting from 46 types of mark and 4 types of mark with sound. It is possible to set a name, a name reading, and a telephone number for all these types of mark. (This does not apply to detour memory points.)

Registering memory points and special memory points enables you to retrieve them on a map or when conducting a route search. Use these points effectively.

If you make a mistake in registration, correct it or delete the registration.

(If 106 memory points or 10 detour memory points have already been registered, delete unnecessary points and reattempt the registration.)

Memory Points

The memory points (including your home and special memory points) can be displayed reordered according to registered type, mark, or order of registration, and the points can be selected from a list during point searches and so on.

Memory point with voice alarm

The following functions can be given to memory points with voice.

- ① **Setting to announce the approach to a point with sound**
Bell, Chime, Music Box
- ② **Setting to announce the approach to a memory point from a specified direction**
Bell (With direction)

Home

Only one registration can be made for your home, and you can search for a route returning you home in a one-touch operation. **Registering this point first is recommended.**

Special memory points

Up to 5 special memory points can be registered and allocated to touch switches to facilitate a search for geographical points. Also, when setting a destination, a route search can be initiated in a one-touch operation.

Areas to avoid

Up to 10 detour memory points can be registered with a name and detour range settable for each point. You can also set names for detour memory points.



The symbol allocated to a detour memory point cannot be changed.

2. Registering, correcting or deleting a memory point

Registering, correcting or deleting your home

One point on the map can be registered as your home.

Register your home to enable a route search to your home from the destination setting screen with one operation. (Refer to page 44)

Registering your home

1 Touch **My Places** in the MENU screen.

2 Touch **Register** for Memory Points.




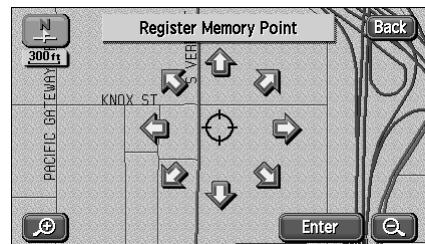
3 Select the map retrieval method and the map on which your home is to be registered will appear.

- See pages 44 and 60, "How to retrieve maps" and "Performing operations on a retrieved map".



4 Touch **Enter**.


- Touch  to move the map.



- Registration enabled on a detailed map with a reduction scale less than 1 mile.
- **Edit** and **Delete** can be operated only if a memory point is already registered.

2. Registering, correcting or deleting a memory point

5 Touch **Attribute**.

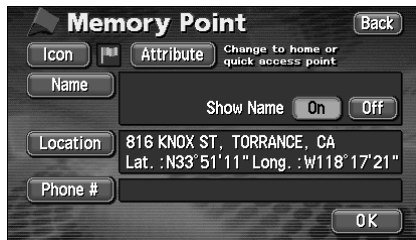

6 Touch **Not Registered**.

Touch switch for registering your home




7 Touch **Icon**.



8 Touch the mark to be registered on the map.

- Touch **Page 2** and **With Sound** to select a different mark. (Refer to page 106)

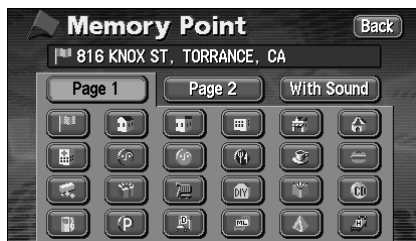


If your home is already registered, touch it to display the home cancellation screen.

Correcting your home

1 Touch **My Places** in the MENU screen.

2 Touch **Edit** for Memory Points.




3 Touch .



4 Touch the touch switch for the item to be corrected or entered.

- Touch **Del.** to cancel your home.
- This correction and entry method is the same as for memory points.
 - Mark (Page 110)
 - Name entry (Page 112)
 - Name display on a map (Page 113)
 - Position (Page 109)
 - Telephone number (Page 111)

5 Touch **OK**.

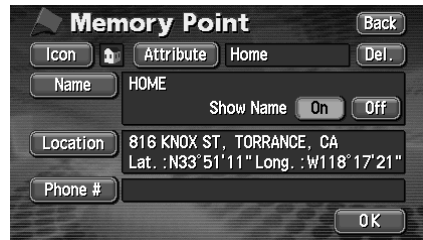



2. Registering, correcting or deleting a memory point


Deleting your home

1 Touch **My Places** in the MENU screen.

2 Touch **Delete** for Memory Points.

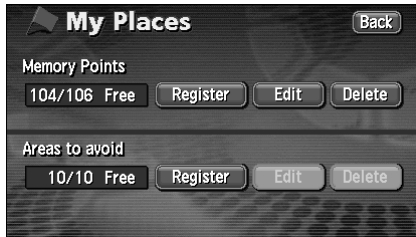

3 Touch .

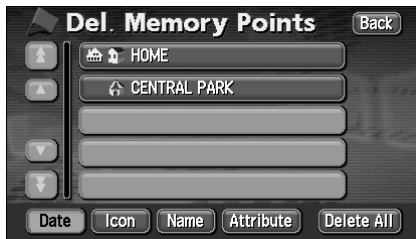

4 Touch **Yes**.

- Touch **No** to return to the original screen.



Maps with a scale of 1 mile or greater detail can be registered.

Registering memory points

Up to 106 memory points (landmarks) can be registered on a map (including 1 home and 5 special memory points). (If registering more than 106 points, first delete unnecessary memory points and proceed.)

Registering memory points enables the following:

- Symbol and name displays on the map
- An alarm that announces when approaching a point
- Maps corresponding to memory points can be retrieved when setting a destination (Refer to page 55)




One-touch registration


Memory points can be registered on a map presently displayed.

1 Touch the position on the map where the memory point is to be registered.

- It is not necessary to scroll the map when registering the present location.

2 Touch **Mark**.

- The memory point will be displayed with a symbol () on the  or  position.

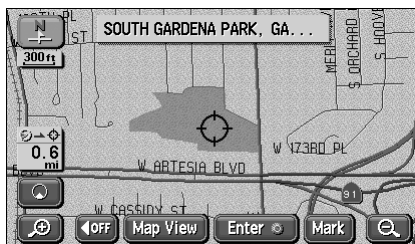


- Maps with a scale of 1 mile or greater detail can be registered.
- Depending on the location, the address displayed for the memory point may include a name of a neighboring area.
- A registered memory point may display a neighboring name or address.

2. Registering, correcting or deleting a memory point

Registering a far away point

1 Touch **My Places** in the MENU screen.

2 Touch **Register** for Memory Points.

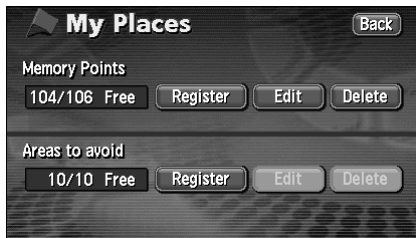


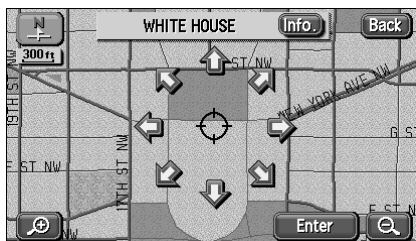
3 Select a map retrieval method to display the map on which the memory point is to be registered.

- See pages 44 and 60, "How to retrieve maps" and "Performing operations on a retrieved map".




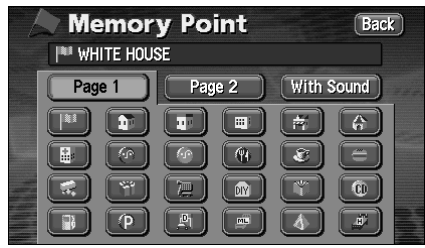
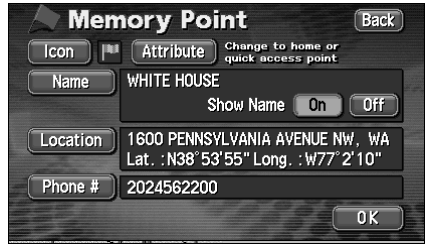
4 Touch **Enter**.

- Touch  to move the map.




- When a memory point is not registered, **Edit** and **Delete** are toned down and will be inoperable even if touched.
- Depending on the location of the registered point and the map retrieval method, the name and telephone number may be entered simultaneously.

- Touch **Icon** to display the selected mark in the  position.
- Touch **Page 1**, **Page 2** or **With Sound** for the memory point **Icon** to change the type of symbol.




Page 1

- Touch **No Icon** to not display the registered memory point symbol on the map.

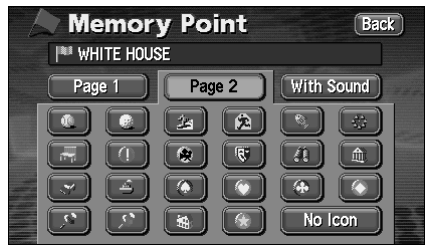

Page 2

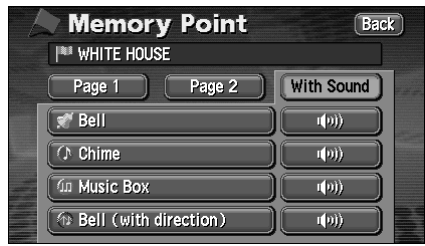


- Selecting a symbol with sound will enable an alarm to sound when about 0.3 miles from the memory point.




With Sound

2. Registering, correcting or deleting a memory point


5 Touch **Bell (with direction)**

- Set the direction.
- To move the direction counterclockwise, touch . To move it clockwise, touch .
- The memory point will be displayed with .

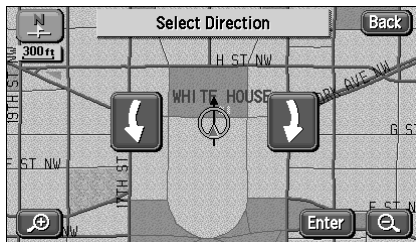


6 Touch **Enter**

[With sound]

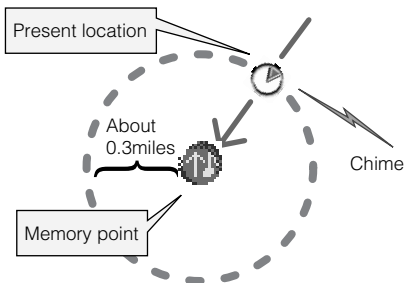

[With direction]

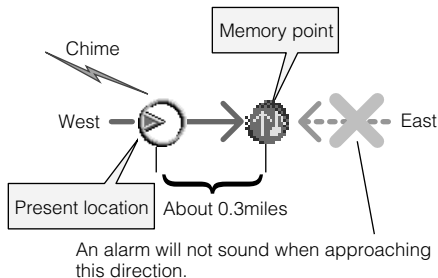

[When setting with direction]

- Touch **Bell (with direction)** to enable an alarm to sound only when approaching a memory point within about 0.3 miles from the set direction.

For example, when driving on a road running East-West, you can set an alarm to sound when approaching a memory point from the west and not sound when approaching it from the east.



- When selecting a symbol **With Sound**, an alarm is enabled.
- Touch  to hear each of the sounds.

Correcting the position of a memory point

1 Touch **My Places** in the MENU screen.


2 Touch **Edit** for Memory Points.

3 Touch the memory point to be corrected.



4 Touch **Location**.


- A map will appear.

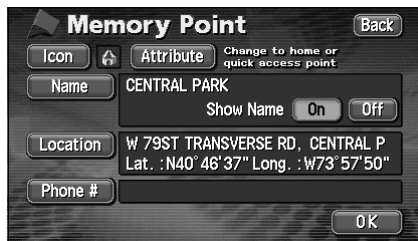


5 Touch .

- Move the map to the position on which the memory point is to be corrected.

6 Touch **Enter**.

- The mark displayed in **4** appears in the  position.
- Correct the position and the name of the position displayed in **4** is also corrected.

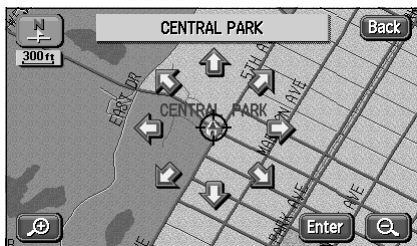

7 Touch **OK**.



Maps with a scale of 1 mile or greater detail can be registered.

2. Registering, correcting or deleting a memory point

Changing the symbol of the memory point

1 Touch **My Places** in the MENU screen.

2 Touch **Edit** for Memory Points.

3 Touch the memory point whose mark you want to change.

4 Touch **Icon**.

5 Touch the symbol to be changed.

- Touch **Page 2** and **With Sound** to select a different mark.
(Refer to page 106)


6 Touch **OK**.




The items in memory point list can be sorted by the Date, Icons, Names or Attributes.

Enter a telephone number for a memory point

- 1 Touch **My Places** in the MENU screen.
- 2 Touch **Edit** for Memory Points.
- 3 Touch the memory point whose telephone number you want to enter.
- 4 Touch **Phone #**.
- 5 Enter the number by touching the switches on the screen one number at a time.
 - If having made a mistake (or if the phone number is already entered), touch **◀** to delete one number at a time.
- 6 Touch **OK**.

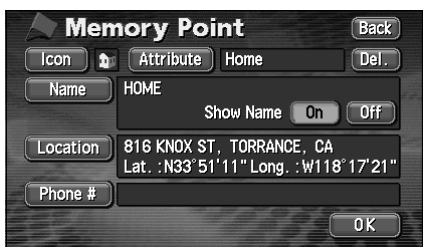

 • Up to 20 digits can be entered.
 • Depending on the registered point, there may be a telephone number already entered for it.

2. Registering, correcting or deleting a memory point

Entering the name of a memory point

1 Touch **My Places** in the MENU screen.

2 Touch **Edit** for Memory Points.


3 Touch the memory point for which you want to enter a name.



4 Touch **Name**.



5 Enter one character at a time by touching the switches on the screen.

- If having made a mistake (or if the name is already entered), touch  to delete one character at a time.



6 Touch **OK**.



Depending on the registered point, there may be a name already entered for it.

Displaying the name of a memory point

The name of the memory point entered can be displayed.



1 Touch **My Places** in the MENU screen.

2 Touch **Edit** for Memory Points.

3 Touch the memory point whose name you want to display.



4 Touch **On** or **Off** for Show Name.

- The pressed touch switch will become green.

5 Touch **OK**.



Maps with a scale of 1 mile or greater detail can be displayed.

2. Registering, correcting or deleting a memory point

Deleting a memory point

1 Touch **My Places** in the MENU screen.

2 Touch **Delete** for Memory Points.

3 Touch the memory point to be deleted.

- To delete all the memory points, touch **Delete All**.



4 Touch **Yes**.

- Touch **No** to return to the original screen.



3. Registering, correcting or deleting a special memory point


Up to 5 special memory points can be registered on one map.

A special memory point is different from other memory points in that, when registered, they can be retrieved with one-touch from the screen appearing when retrieving a map. Also, when setting a destination, a route search can be initiated with one-touch from the destination setting screen. (Refer to page 65)

Registering a special memory point

1 Touch **My Places** in the MENU screen.

2 Touch **Register** for Memory Points.

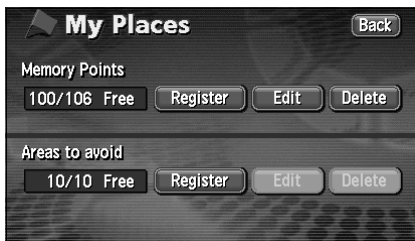



3 Select a map retrieval method and the map corresponding to the special memory point to be registered appears.

- See pages 44 and 60, "How to retrieve maps" and "Performing operations on a retrieved map".



4 Touch **Enter**.

- If  is displayed, touch it to move the map.
- The special memory point will appear on the  position.




3. Registering, correcting or deleting a special memory point

5 Touch **Attribute**.



6 Touch **Not Registered** for the special memory point (1 to 5).

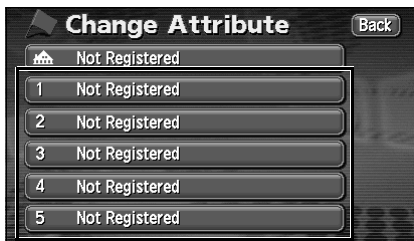

7 Touch **OK**.

Touch switches for special memory point (1 to 5)



- Maps with a scale of 1 mile or greater detail can be registered.
- Depending on the location, the address displayed for the special memory point may include a name of a neighboring area.
- A neighboring name or address will be displayed for the registered special memory point.
- Depending on the location of the registered point and the map retrieval method, the name and telephone number may be entered simultaneously.
- **Edit** and **Delete** will appear only when a memory point is already registered.
- Select an already registered telephone number and touch it to display a deletion screen for the special memory point corresponding to that selected telephone number.

Correcting a special memory point

1 Touch **My Places** in the MENU screen.

2 Touch **Edit** for Memory Points.

3 Touch the special memory point to be corrected/entered.



4 Touch the touch switch for the item to be corrected or entered.

- This correction and entry method is the same as for memory points.
 - Mark (Page 110)
 - Name entry (Page 112)
 - Name display on a map (Page 113)
 - Position (Page 109)
 - Telephone number (Page 111)

5 Touch **OK**.



3. Registering, correcting or deleting a special memory point

Deleting a special memory point

1 Touch **My Places** in the MENU screen.

2 Touch **Delete** for Memory Points.


3 Touch the special memory point to be deleted.

- To delete all the memory points, touch

Delete All.

4 Touch **Yes**.

- Touch **No** to return to the original screen.

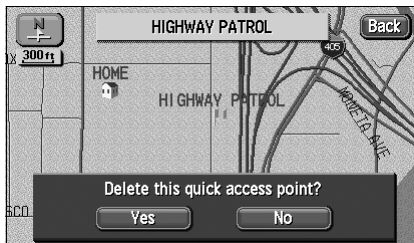

4. Registering, correcting or deleting detour memory points

Registering detour memory points


Up to 10 detour memory points can be registered. (If registering more than 10 points, first delete unnecessary detour memory points and proceed.)

By registering detour memory points, you can search for a route that takes you through the registered area when conducting a route search.

This function is convenient when knowing what roads are blocked due to construction or accidents or congested.

1 Touch **My Places** in the MENU screen.

2 Touch **Register** for Area to Avoid.

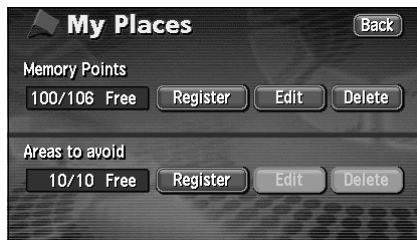


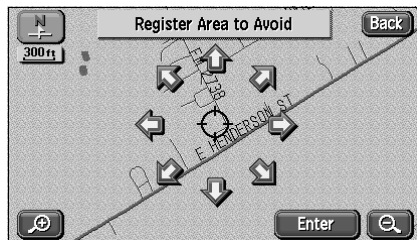
3 Select the map retrieval method to display the map on which a detour memory point is to be registered.

- See pages 44 and 60, "How to retrieve maps" and "Performing operations on a retrieved map".



4 Touch **Enter**.

- Touch  to move the map.




- **Edit** and **Delete** will appear only when a detour memory point is already registered.
- The route may take you through a detour depending on the position of the set destination or the present location.

4. Registering, correcting or deleting detour memory points

5 Touch ▲ or ▼ to set the area to be detoured.

- To widen the area, touch ▲, to narrow the area, touch ▼.
- When reaching the maximum or minimum permissible area, the ▲ or ▼ switches invert and are inoperable even if touched.

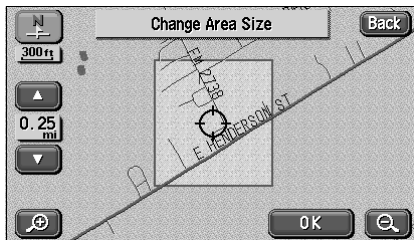

6 Touch **OK**.

- The detour memory point will appear on the Ⓧ position with a ✕ mark (smallest point) or a □ mark (area).

7 Touch **OK**.




- The following 10 values represent settable sizes for detour areas: Point, 150 ft, 300 ft, 700 ft, 1/4 mi, 1/2 mi, 1 mi, 2 mi, 4 mi, 8 mi
- A neighboring name or address will be displayed for the registered detour memory point.
- The address appearing for the detour memory point may differ depending on the location or the registration method.
- Depending on the location of the registered point and the map retrieval method, the name may be entered simultaneously.

Correcting a detour memory point

1 Touch **My Places** in the MENU screen.


2 Touch **Edit** for Area to Avoid.

3 Touch the Area to Avoid to correct/enter.

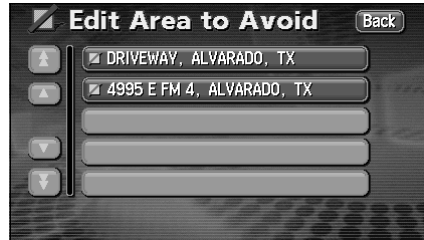

4 Touch the touch switch for the item to be corrected or entered.

- The correction/entry method is the same as for memory points.
 - Name entry (Page 112)
 - Position (Page 109)
- Touch **Area Size** to change the detour area. (Page 119)

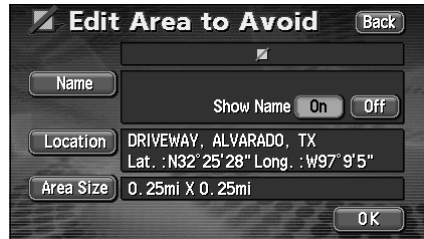

5 Touch **OK**.

4. Registering, correcting or deleting detour memory points


Deleting a detour memory point

1 Touch **My Places** in the MENU screen.

2 Touch **Delete** for Area to Avoid.

3 Touch the Area to Avoid to be deleted.

- To delete all detour memory points, touch **Delete All**.

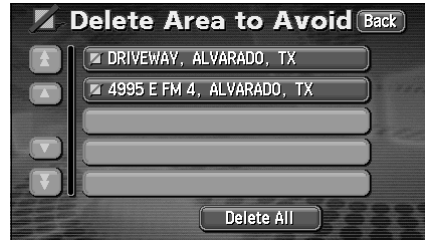

4 Touch **Yes**.

- Touch **No** to return to the original screen.




5. Destination archive

Deleting entries from the destination archive

Points on a map set as destinations are automatically recorded and can serve to retrieve a map when setting a destination (maximum 100 destinations). When exceeding 100 destinations, the oldest entry is deleted every time a new one is entered. Unnecessary destinations can be deleted.


1 Touch **Setup** in the MENU screen.

2 Touch **Delete** for Previous Point.

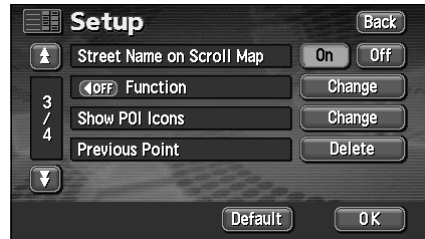


3 Touch the point name to be deleted.

- To delete all destination archive items, touch **Delete All**.

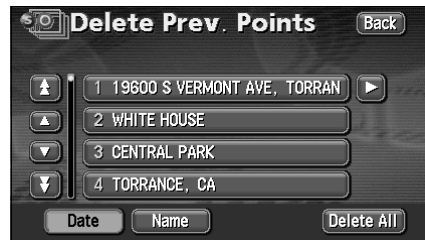

4 Touch **Yes**.

- Touch **No** to return to the original screen.

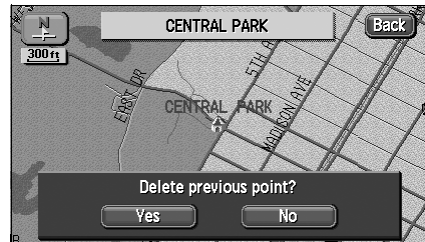

1. Information screen


The information function contains "SETTING", "ESN" and "SYSTEM CHECK". The "CAMERA SCREEN" function can be operated by installing the optional items.

Information screen

1 Press **INFO** to display the INFORMATION screen.

2 Touch the touch switch.

- Select an item.
- The following functions are possible from the information screen.

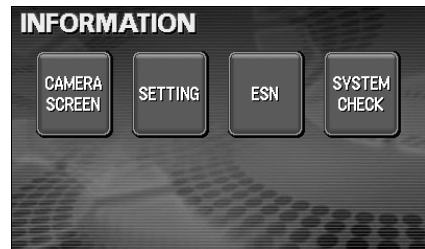

Display order/item (touch switch)		Function	Page
1	CAMERA SCREEN	Display of Rear View Camera	126
2	SETTING	Settings for the background, beep, etc.	OWNER'S MANUAL/ Audio
		Setting for Rear View Camera	130
3	ESN	Settings for the ESN (ECLIPSE Security Network)	OWNER'S MANUAL/ Reference Guide
4	SYSTEM CHECK	Display of system status	125




CAMERA SCREEN button is available when backeye camera (BEC104) is conneted.

SYSTEM CHECK screen

1 Touch **SYSTEM CHECK** on the INFORMATION screen.

- The SYSTEM CHECK screen is displayed.

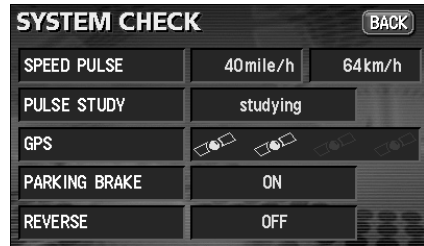

Item (touch switch)	Function
SPEED PULSE	Displays the current vehicle speed.
PULSE STUDY	Studies the vehicle speed during events such as tire changes. Studying: Pulse study in progress Complete: Pulse study completed
GPS	Displays the GPS reception status.
PARKING BRAKE	Displays the parking brake status. ON: Parking brake applied OFF: Parking brake not applied
REVERSE	Displays the reverse gear selection status. ON: Reverse gear selected OFF: Reverse gear not selected

1. Rear View Camera operations

When the optional Rear View Camera is installed, the rear view image can be displayed on the monitor screen.



- Do not rely too heavily on the Rear View Camera.
- Please use the Rear View Camera as a back up means to check for obstructions behind the vehicle.
- Raindrops or other natural phenomena may blur the camera's image.
- Do not backup your vehicle looking only at the monitor. Use the rear view mirror and both side mirrors to check for any obstruction behind or around your vehicle.
- Do not use the Rear View Camera in the following situations:
 - On frozen, slippery or snowbound roads
 - With the trunk opened
 - When using tire chains or a spare tire
 - On a slope or any uneven road
- When the external air temperature is low, the image may darken or become faint. Images of moving objects in particular may be distorted, or they may not be visible on the screen, so the driver must confirm safety around the vehicle directly by eye.



- The actual position and distance of people or objects may vary depending on the features of the camera lens.
- Do not expose the camera to strong shocks such as hitting it or knocking it onto other objects. The Rear View Camera may not function properly if the position of the camera or its mounting angle is incorrect.
- The camera is waterproof. Do not uninstall, dismantle or reconfigure the unit. Otherwise, the Rear View Camera may not function properly.
- If strongly rubbing the camera cover or using a hard brush or abrasive to clean it, the camera may get scratched adversely affecting the image quality.
- The camera cover is made of plastic. Do not apply an organic solvent, body wax, oil remover, glass coating, etc. If having applied any of the above, wipe it off immediately.
- Pouring hot water on the Rear View Camera to deice it in cold weather can lead to a drastic change in temperature that may render normal operation impossible.
- The Rear View Camera may not operate normally if the camera is damaged as a result of having hit the unit. Immediately bring it to the store of purchase for an inspection.
- Do not leave it in direct sunlight for long periods of time. Otherwise, a printed image phenomenon may result.
- The figure is merely an example. The range appearing on the monitor screen varies depending on the vehicle model.
- The instant the vehicle is put in reverse, part of the monitor will appear white then gradually stabilize.
- A white vertical band will appear when struck by light from the sun, headlights or any other strong light beam source (Smear effect).
- After having used the unit for a long time, white scratches and vertical lines may appear due to a rise in temperature depending on the features of the CCD.
- The 50 Hz power source range fluorescent light may cause flickering in the screen. This is not a malfunction.
- Because the Rear View Camera uses a special lens, the image and distance appearing on the screen differs from the actual image and distance.

1. Rear View Camera operations

Rear View Camera image

Displaying the rear view image manually (MANUAL)



1 Touch **CAMERA SCREEN** on the INFORMATION screen.

- The rear image appears on the monitor screen.
- Touch any of the following switches to return to the normal screen:

NAVI , **DEST** , **(NAVI)MENU** , **INFO** .



CAMERA SCREEN button is available when backeye camera (BEC104) is conneted.

Displaying the rear view image in reverse gear (AUTO)

To display the rear view image in reverse gear, set "AUTO" for the "CAMERA SCREEN" setting in advance. (Refer to page 130)

1 Select reverse gear.

- The rear image appears on the monitor screen.
- On shifting to any gear other than reverse, the normal screen is redisplayed.



- The range of the image may vary depending on the vehicle and the road conditions.
- There is a limit to the range of the camera. Objects near the ends of the bumper and under the bumper cannot appear.
- The rear image color may vary from the actual objects.
- The image brightness and contrast can be adjusted. (Refer to "**Adjusting/setting the screen**" in the **OWNER's MANUAL/Audio**.)
- Depending on the vehicle, the back guideline may appear misaligned on the left and right. This is not a malfunction.
- In the following situations, the screen may be difficult to view but does not constitute a malfunction.
 - In a dark area (such as at night)
 - The temperature near the camera is high or low
 - Raindrops are on the camera lens or the humidity is high (when raining)
 - A foreign object is near the camera (such as mud)
 - When the sun or a beam from headlights strikes the camera lens directly
 - When a high-luminance point strikes the camera (such as the reflection of the sun's rays on the chassis), a Smear effect* typical of CCD cameras may occur.

[Screen condition]



*Smear effect: A phenomenon where a vertical line appears from a high-luminance point striking the camera (such as the reflection of the sun's rays on the chassis).

High-luminance point

1. Rear View Camera operations


Rear View Camera settings

You can select whether or not the rear view image is automatically displayed on the monitor on selecting reverse gear.

1 Touch **SETTING** on the INFORMATION screen.

2 Touch **AUTO** or **MANUAL** for CAMERA SETTING.

- **AUTO** : The rear view image is displayed in reverse gear.
- **MANUAL** : The rear view image can be displayed by touching **CAMERA SCREEN** on the INFORMATION screen.

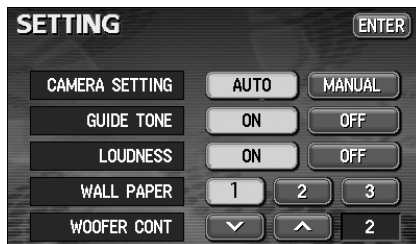

Even when "AUTO" is set, the rear view image can be displayed by touching **CAMERA SCREEN** on the INFORMATION screen.

MEMO

Optional
function









1. Correction of the present location and distance

A correction is necessary in the following situations:

- When changing a tire: perform an automatic correction (Distance correction)

Also, a correction can also be made in the following situations.

- When the  vehicle position mark appears in a location different from the actual present location (the vehicle position  mark is misaligned), the  vehicle position mark position and direction can be corrected. (Present location correction)
- When the progression of the  vehicle position mark on the map and the actual progression of the vehicle while driving: the  vehicle position mark progression can be corrected. (Distance correction)


However, even if the  vehicle position mark on the map is misaligned, continue driving for a moment and the present location will be automatically corrected using map matching and GPS data. (Depending on the case, this may take several minutes.)

In the event the device does not use GPS data and the present location is not automatically corrected, park the vehicle in a safe area and perform present location correction.

Present location correction


1 Touch **Setup** in the MENU screen.

2 Touch **Adjust** for Calibration.

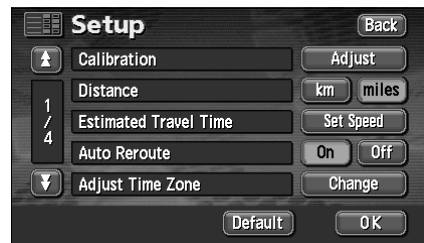

3 Touch **Position/Direction**.





4 Touch .


- Move to the actual position of the present location on the map.

5 Touch **Enter**.

6 Set the direction.

- To move the direction counterclockwise, touch . To move it clockwise, touch .

7 Touch **Enter**.

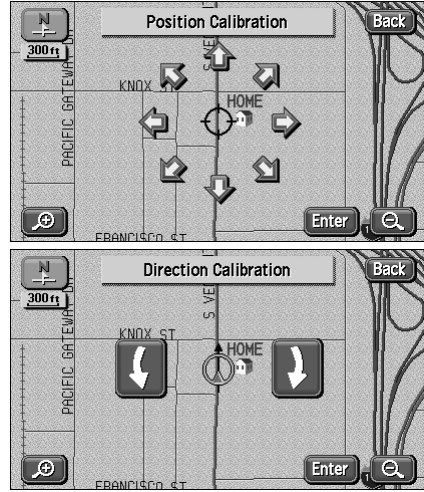

Maps with a scale of 1 mile or greater detail can be corrected.

1. Correction of the present location and distance

Correcting the distance

1 Touch **Setup** in the MENU screen.

2 Touch **Adjust** for Calibration.



3 Touch **Tire Change**.

- Automatic correction is performed.
- The touch switch turns green during automatic correction.
- Using GPS data, the correction will automatically be completed after driving a moment and the touch switch will turn back to blue.



- The device performs automatic distance correction (automatic correction) using GPS and vehicle speed signals. This may be delayed in the event of a sharp deviation that overwhelms the automatic correction function (changing a tire, being towed by another vehicle, etc.)
In such a case, drive about 6 miles along a road indicated by favorable GPS signal reception conditions.
- If correction is impossible, have the device inspected at the store of purchase.
- During automatic correction, the vehicle position may be misaligned.
- Even if the automatic correction is complete, because the distance correction has a learning function, there may be variations in the progression of the vehicle position mark depending on the driving conditions.


2. Map DVD-ROM data

The information on the map DVD-ROM can be viewed.

The figure below is merely an example. The displays may vary depending on the type of map DVD-ROM and when it was made.

Map DVD-ROM data display

- 1 Touch **Map DVD** in the MENU screen.

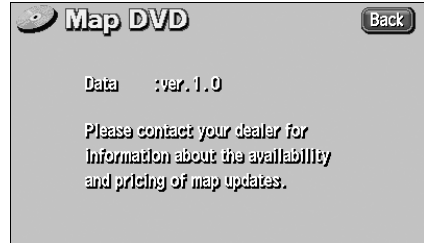

3. Accuracy and error

Positioning accuracy

The GPS is a very accurate satellite controlled by the U.S. Department of Defense. Errors may result due to the occurrence of a multipath caused by reflections off buildings or other structures.

GPS signal quality and reception conditions


Any obstruction coming between the satellite and the GPS antenna will disrupt signal reception from the satellite.

Also, 3 or more signals must be received simultaneously to enable positioning. When driving along locations such as those shown below, GPS positioning is not possible.


In addition, obstructions placed on or near the GPS antenna (such as a load) will disrupt signals from the satellite.

- Because the GPS satellite orbits the earth, signal reception conditions may vary depending on the position of the satellite even if driving in the same area. Signals from a satellite orbiting near the horizon are more likely to be obstructed.
- The GPS satellite is controlled by the U.S. Department of Defense and can be deliberately made to lose positioning accuracy.



Underground, in a tunnel or
in an indoor parking structure

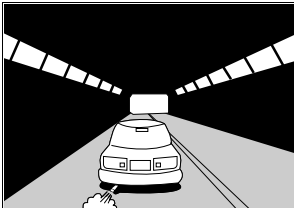


Surrounded by obstructions
such as tall buildings

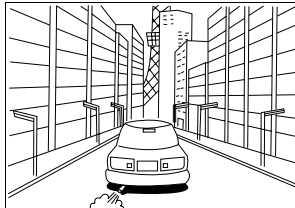


In a building

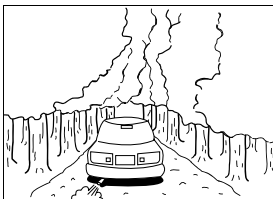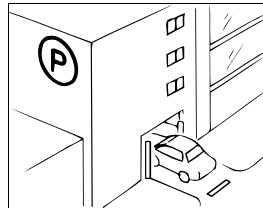

Densely wooded areas

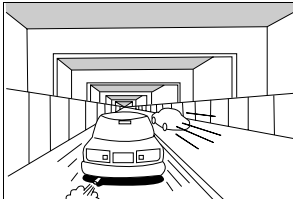

Under an elevated road

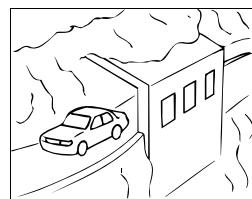

On a cliff side road or
at a cavern opening



Caution

Under the following conditions, make sure to install the GPS antenna in the position indicated in the instruction manual for your vehicle model.

- If the noise emitted from another electrical device diminishes signal reception.
- If this device may represent an obstruction to the proper operation of airbags.
- If the satellite signal received from the side or rear of the vehicle is diminished because of a windshield pillar or roof panel.

3. Accuracy and error

Present location display error

In order to find the exact position of the present location, this device uses compiled data from the GPS satellite, vehicle speed sensor and vibration gyro sensor. Because each of these contains a margin of error, the present location indicated may not coincide with your actual positioning.

If the indication is different from the actual positioning, the present location displayed can be corrected. Park the vehicle in a safe place first before proceeding.

Error due to having changed a tire

The device calculates the distance traveled by the vehicle using a speed sensor (in proportion to the tire rotation). The following situations would result in a significant error that may render proper present location positioning impossible.

- When using a sub-standard tire
- When driving on a snow covered, gravel road or any slippery road
- When the tire air pressure is incorrect
- When using new tires (the distance correction coefficient setting can be changed and adjusted)


Correcting the map matching vehicle position sensor

Map matching is a system that compares present location positioning data from the GPS and other sources with information concerning all the roads driven on until now in order to correct the present location onto the most appropriate road.

This device corrects the present location data compiled from a combination of independent navigation and satellite navigation and matches it with the shape of the road.


However, there may be instances when the present location error cannot be avoided and the position indicated on the map does not coincide with your actual positioning even after a correction using map matching.

Also, driving along a road whose actual shape differs from the map data may result in a vehicle position mark misalignment.

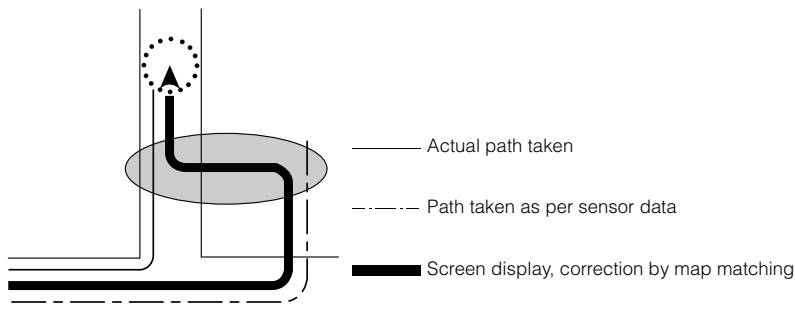


Present location display, route guidance accuracy


The following situations are not malfunctions but merely some examples where inaccurate present location positioning and/or route guidance occurs depending on the road and driving conditions.

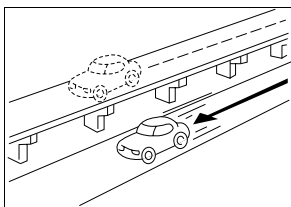


The present location appears on a road running parallel to the road taken.

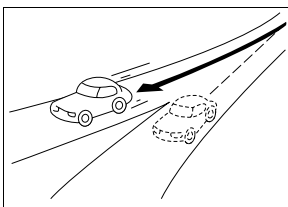


When turning on a road forking into two roads making a "Y" shape, the present location appears on the other road.

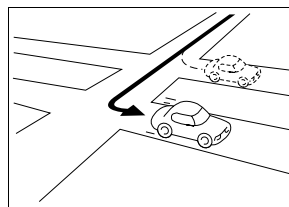


When making a turn, the present location appears on the road just before or after the road turned on.

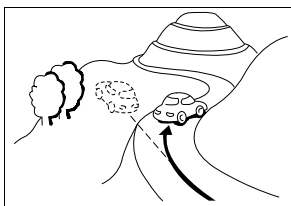

The present location appears misaligned when driving on steep roads.

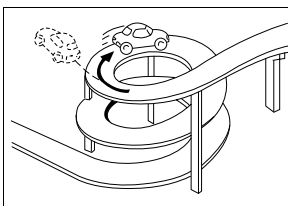


The present location appears misaligned when driving on a continuous curve in the same direction.

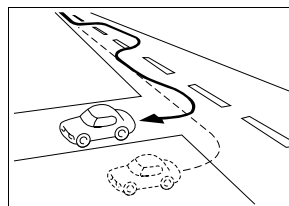


The present location appears misaligned when meandering such as changing lanes.


3. Accuracy and error

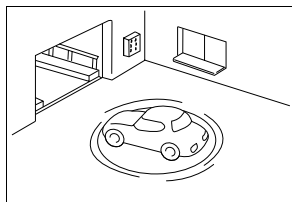


The present location appears misaligned when the vehicle is rotated on a parking structure turntable with the ACC turned OFF.

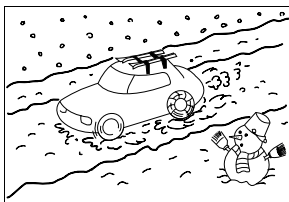


The present location appears misaligned when driving on a snowbound or slippery road or when using tire chains.

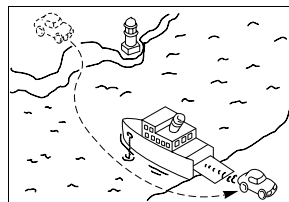


When the vehicle is moved by ferry or a means other than being driven, the GPS positioning will indicate a present location on the spot where the vehicle was prior to being moved.

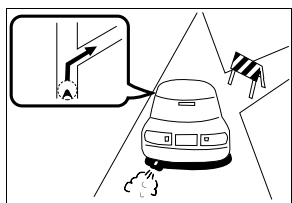

When route guidance indicates a road that is actually blocked off (regular traffic prohibited).

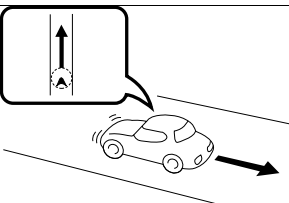

The present location appears misaligned when turning back.

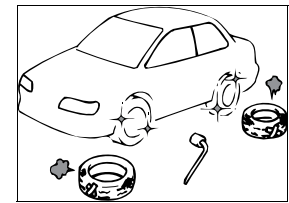


When having changed a tire(s), the vehicle position mark may be misaligned.


Road and geographic name data

The roads and geographic names are subject to change after the compilation of the map database and may differ from the actual roads and names.


Route guidance

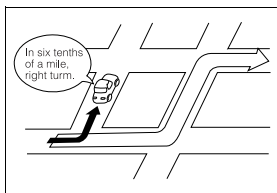


When having turned on an intersection that is not part of the route guidance, there may be an error in the voice guidance instructions.

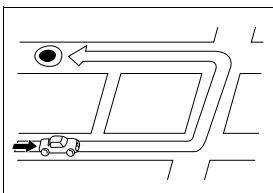


When searching for a route, the route provided may include a detour.

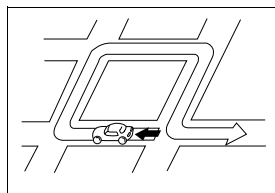


The route guidance may instruct a U-turn.

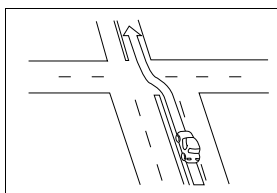

When driving on a straight road, the route guidance may instruct you to go straight (in cases where the shape of intersections is difficult to determine).

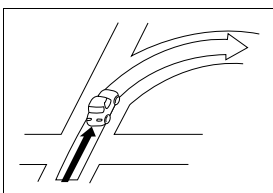


No route guidance may occur even if turning at an intersection.

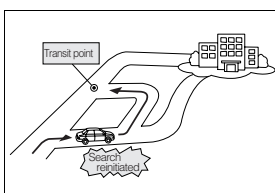


When driving towards the destination without passing through a transit point, the device may reinitiate a route search and provide a new route that takes you towards that transit point.


3. Accuracy and error

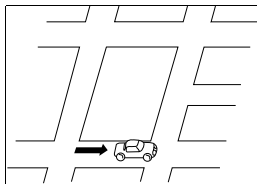




When searching for a route, the route display may not appear in time for the next turn.

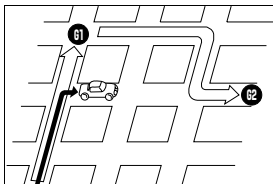

In case of multiple destinations, when having bypassed the next destination, a route search is reinitiated to provide a route returning to it.

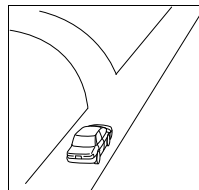

While providing guidance on where you are headed, several geographical names may be indicated.

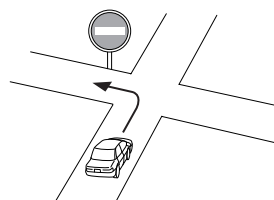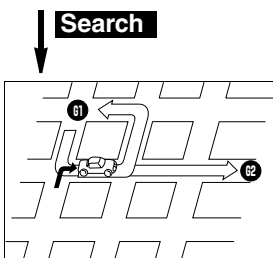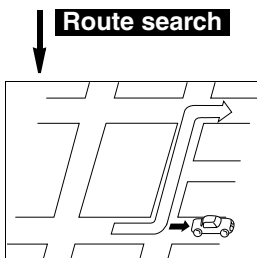

Drive following the actual traffic regulations.

- The time it takes the device to reinitiate a route search while driving on a highway may be lengthy.
- When correcting the present location mark manually and then driving under conditions where the positioning is not corrected, the position will not be properly indicated.
- The route may not change even if reinitiating a search.
- If having set a present location, destination or transit point on a remote island or in an area where there are no guidable roads, the device may not search for a route.
- The device may not search for a route if the present location and the destination are in close proximity.
- The route guidance will not necessarily recommend toll roads even if having selected to prioritize toll roads in the search conditions.

Similarly, even if having selected not to prioritize toll roads, a route using toll roads may be displayed.

(The "Prioritize/Do not prioritize toll roads" setting enables the prioritization of either toll roads or local roads when a selection of one is made possible.)

MEMO



1. Information you should know

If one of these messages appears

If any of the following messages are displayed, check the unit while referring to the Cause and Remedy columns.

Messages related to general navigation

Messages	Cause	Corrective action
Check GPS antenna	The GPS antenna is not connected properly.	Connect the GPS antenna properly.
Check speed pulse	The device is not properly connected to the vehicle speed sensor.	Connect the vehicle speed sensor properly.
No DVD. Please insert map DVD.	The map disk is not inserted.	Insert the map disk.
Unable to read data. Check if map DVD is correct.	A disk other than the map disk is inserted.	Remove the inserted disk and insert the correct map disk.
Unable to read DVD correctly. Check if the DVD is damaged or dirty.	The data cannot be read due to scratches and/or dirt on the map disk.	Check whether there are any scratches and/or dirt on the map disk and contact the store of purchase.
DVD check in process.	The device is now reading the map disk data.	Wait until a map is displayed on the screen.
Unable to read data. Temperature is too high.	The DVD player temperature is high.	Wait until the temperature has fallen.
Too many characters were input.	Character entry count for memory point names beyond capacity.	Decrease the character entry count and reenter.
No previous points registered.	There are no previously set destinations.	Register a destination in the archive and proceed. (Setting a destination registers it in the archives.)
Home is not registered. Register in menu Memory Point.	Your home is not registered as a memory point.	Register your home as a memory point and proceed. (Refer to page 101)
No quick access point registered. Register in menu Memory Point.	A special memory is not registered for the memory point.	Register a special memory for the memory point and proceed. (Refer to page 115)

Messages	Cause	Corrective action
No roads possible for guidance near current position. Please refer to map.	There are no roads where route guidance is possible in the vicinity of the present location.	Refer to a map and proceed.
No roads possible for guidance near current position and destination. Please refer to map.	There are no roads where route guidance is possible in the vicinity of the present location and destination.	Refer to a map and proceed.
No roads possible for guidance near destination. Please refer to map.	There are no roads where route guidance is possible in the vicinity of the destination.	Refer to a map and proceed.
Seasonal traffic restricted roads on this route.	The system searched for a route that included a seasonally restricted segment.	If changing to a route that bypasses the seasonally restricted segment is desired, bypass the restricted segment after changing the route. (Refer to page 70)
Destination too far. Please change to a point within 5000 km in a straight line.	The set destination is too far.	Set the destination within a 5,000 km distance in straight line.
2 preferred roads have been set. Perform operation again after deleting them.	You attempted to set 3 or more transit road indications when changing the route.	Up to 2 transit roads can be indicated. Delete unnecessary transit roads before adding a new one.
No roads possible for guidance nearby. Perform operation again after moving.	There are no roads available to serve as transit roads when indicating one for a route change.	Move the map and indicate a transit road among the roads in the vicinity.
Unable to save additional points. Please delete some points.	You attempted to set more than 5 destinations.	Up to 5 destinations can be set. Delete unnecessary destinations and proceed with adding new ones. (Refer to page 79)
Unable to search for new route. Previous route will be displayed.	A new route could not be found when reinitiating a route search.	Route guidance will proceed using the present route. (Drive referring to the route guidance.)
Destination is nearby. Please check the map.	You attempted to set the destination in a nearby location.	The destination is nearby. Refer to the map and continue driving.
No corresponding POI nearby.	There is no corresponding POI found nearby for the POI search in the vicinity.	Search for the POI in another area.
No corresponding POI on route.	There is no corresponding POI found nearby for the POI search along the route.	Search for the POI in another area.
Position cannot be specified in this scale. Switching to more detailed map.	You attempted to set/register a destination/memory point on a map with a reduction scale of more than 0.5 miles.	Set/register a destination/memory point on a more detailed map (with a reduction scale of less than 0.5 miles).

1. Information you should know






Messages	Cause	Corrective action
The destination is surrounded by the water. Change destination?	There is a river or other body of water between the destination and the nearest road.	Touch Yes , move the map and set a destination near the road. Touch No to set the destination on the position displayed.
No memory point registered. Register in menu Memory Point.	You attempted to retrieve a map using a memory point when there is none registered.	Register a memory point and proceed. (Refer to page 105)
Unable to register additional points. Perform operation again after deleting unnecessary points.	You attempted to register a memory point when there are 106 points already registered.	Delete unnecessary memory points and proceed to register a new one. (Refer to page 114)

Before asking for repairs

Slight differences in operation can sometimes be mistaken for malfunctions, so check the following table before asking for any repairs.

If the following fail to solve the problem, contact the place of purchase.

Items related to general navigation functions

Symptom	Possible reason	Corrective action
The map does not move even when driving.	Is the display showing a screen other than the present location screen?	Display the present location screen. (Refer to page 26)
The  vehicle position mark does not appear.	Is the display showing a screen other than the present location screen?	Display the present location screen. (Refer to page 26)
The GPS mark does not appear.	Is the device in a situation where GPS data cannot be utilized?	Move the vehicle to an area free of obstructions or remove the object placed on the GPS antenna.
Voice guidance not outputted.	Is the "Voice Guidance" item for set up set to Off ?	Touch On for "Voice Guidance" in set up.
	Is the guidance paused?	If the route guidance is paused, resume guidance. (Refer to page 83)
	Is the guidance volume turned down (voice OFF)?	Turn up the volume. (Refer to page 25)
Small blemishes or luminescent spots on the monitor screen	This phenomenon is characteristic of liquid crystal panels. The liquid crystal panel is made with high-tech precision and has 99.99% or more effective imaging.	This is not a defect, so please use the deck in this condition.
For a moment after turning the engine switch ON, there is an irregular display on the screen.	In cold weather, the liquid crystal panel's backlight features may emit light unevenly.	This condition stops in a few minutes as the backlight warms up.
The screen is difficult to view.	Are the contrast and brightness correctly adjusted?	Adjust the contrast and brightness. (Refer to page 21)
The  vehicle position mark appears on a spot different from the actual present location. (The  vehicle position mark is misaligned.)	The  vehicle position mark may be misaligned depending on the satellite conditions or vehicle conditions (where and how the vehicle is driven). Also, the  vehicle position mark may be misaligned if driving on a newly constructed road or on a road with a shape that differs from the shape recorded in the map data.	Continue driving and, in a moment, the present location will be automatically corrected using the map matching and GPS data. (Depending on the case, this may take several minutes.) If signals from the GPS are not utilized and the present location is left uncorrected, park the vehicle in a safe place and correct the present location. (Refer to page 132)

2. Copyright

©GDT, Geographic Data Technology, Inc.

©2003 NAVTEQ. All rights reserved.

Data by infoUSA Copyright ©2003, All Rights Reserved.

©2004 VISA Corporation

National Research Bureau ©2003

The Bullseye Design is a registered trademark of Target Brands, Inc.

END USER LICENSE AGREEMENT

PLEASE READ THIS AGREEMENT CAREFULLY BEFORE USING THE NAVIGATION SYSTEM

THIS IS A LICENSE AGREEMENT FOR YOUR COPY OF THE MAP DATABASE ("The DATABASE"), ORIGINALLY MADE BY Geographic Data Technology, Inc. ("GDT"), USED IN THE NAVIGATION SYSTEM. BY USING THE DATABASE, YOU ACCEPT AND AGREE TO ALL TERMS AND CONDITIONS SET FORTH BELOW.

OWNERSHIP

The DATABASE and the copyrights and intellectual property or neighboring rights therein are owned by GDT or its licensors.

LICENSE GRANT

GDT grants you a non-exclusive license to use your copy of the DATABASE for your personal use or for use in your business' internal operations. This license does not include the right to grant sub-licenses.

LIMITATIONS ON USE

The DATABASE is restricted for use in the specific system for which it was created. Except to the extent explicitly permitted by mandatory laws, you may not extract or re-utilize any portion of the contents of the DATABASE, nor reproduce, copy, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the DATABASE.

TRANSFER

You may not transfer the DATABASE to third parties, except together with the system for which it was created, provided that you do not retain any copy of the DATABASE, and provided that the transferee agrees to all terms and conditions of this AGREEMENT.

DISCLAIMER OF WARRANTY

GDT does not warrant or make any representations regarding, either express or implied, regarding the use or results of the use of the DATABASE in terms of its correctness, accuracy, reliability, or otherwise, and expressly disclaims any implied warranties of quality, performance, merchantability, fitness for a particular purpose or non-infringement. GDT does not warrant that the DATABASE is or will be error free. No oral or written information or advice provided by GDT, your supplier or any other person shall create a warranty.

LIMITATION OF LIABILITY

The price of the DATABASE does not include any consideration for assumption of risk of consequential, indirect or unlimited direct damages which may arise in connection with your use of the DATABASE. Accordingly, in no event shall GDT or supplier of the navigation system using the DATABASE ("Supplier") be liable for any consequential, special, incidental or indirect damages, including without limitation, loss of revenue, data, or use, incurred by you or any third party arising out of your use of the DATABASE, whether in an action in contract or tort or based on a warranty, even if GDT or the Supplier has been advised of the possibility of such damages. In any event GDT's liability for direct damages is limited to the price of your copy of the DATABASE.

THE DISCLAIMER OF WARRANTY AND LIMITATION OF LIABILITY, SET FORTH IN THIS AGREEMENT, DO NOT AFFECT OR PREJUDICE YOUR STATUTORY RIGHTS WHERE YOU HAVE ACQUIRED THE DATABASE OTHERWISE THAN IN THE COURSE OF A BUSINESS.

Some states and laws do not allow the exclusion of implied warranties, so the above disclaimer may not apply to you.

WARNINGS

The DATABASE reflects reality as existing before you received the DATABASE and it comprises data and information from government and other sources, which may contain errors and omissions. Accordingly, the DATABASE may contain inaccurate or incomplete information due to the passage of time, changing circumstances, and due to the nature of the sources used. The DATABASE does not include or reflect information on - inter alia - neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

GOVERNMENT END USERS

If the DATABASE is for a region of North America and is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, the DATABASE is licensed with "limited rights." Utilization of the DATABASE is subject to the restrictions specified in the "Rights in Technical Data and Computer Database" clause at DFARS 252.227-7013, or the equivalent clause for non-defense agencies. Manufacturer of the DATABASE for North America is Geographic Data Technology, Inc., at 11 Lafayette Street, Lebanon, New Hampshire 03766, USA.

2. Copyright

END USER NOTICE

PLEASE READ THIS NOTICE CAREFULLY BEFORE USING THIS NAVIGATION SYSTEM

The Point Of Interest Data ("POI" Data) in the navigation system is in part provided by infoUSA Inc. ("infoUSA"). By using the POI Data, you accept and agree to all terms and conditions set forth below.

1. Ownership

All rights, title and interest to the infoUSA POI Data shall be retained by infoUSA.

2. Limitations on use

Except to the extent explicitly permitted by mandatory laws, you may not extract or re-utilize any portion of the contents of the POI Data, nor reproduce, copy, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the POI Data.

3. Transfer

You may not transfer the POI Data to third parties, except together with the system for which it was created, provided that you do not retain any copy of the POI Data.

4. Disclaimer of warranty

EXCEPT AS STATED HEREIN, INFOUSA MAKES NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR WARRANTY OF MERCHANTABILITY.

5. Limitation of Liability

EITHER INFOUSA OR SUPPLIER OF POI DATA SHALL NOT BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES MADE OR ALLEGED IN CONNECTION WITH YOUR USE OF THE POI DATA.

END USER LICENSE AGREEMENT

Personal Use Only. You agree to use this information for solely personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify the information or remove any copyright notices that appear on the information in any way. You may not decompile, disassemble or reverse engineer any portion of this information, and may not transfer or distribute it in any form, for any purpose. Without limiting the foregoing, you may not use this information with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications.

No Warranty. This information is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers, collectively "DENSO") make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, and DENSO expressly disclaims any warranties regarding content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, non-infringement, usefulness, use or results to be obtained from this information, or that the information or server will be uninterrupted or error-free.

Some states, territories and countries do not allow certain warranty exclusions, so to that extent, the above exclusion may not apply to you.

Disclaimer of Liability: DENSO SHALL NOT BE LIABLE TO YOU FOR ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF ITS NATURE, ALLEGING ANY LOSS, INJURY OR DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING ANY LOSS OF PROFIT, REVENUE OR CONTRACTS ARISING OUT OF YOUR POSSESSION, USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states, territories and countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Indemnity. You agree to indemnify, defend and hold DENSO and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of this information.

END USER NOTICE

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

END-USER TERMS

The Map Data Disc ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and [LICENSEE] ("[LICENSEE]") and its licensors (including their licensors and suppliers) on the other hand. Such licensors include NAVTEQ North America, LLC [insert "NAVTEQ B.V." where European Licensed Data is used]. Without limiting the foregoing, you agree that NAVTEQ North America, LLC shall have the right to enforce these Terms directly against you.

©2003 NAVTEQ. All rights reserved.

2. Copyright

TERMS AND CONDITIONS

Personal Use Only.

You agree to use this Data for the solely personal, non commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you may copy this Data only as necessary for your personal use to (i) view it, and (ii) save it, provided that you do not remove any copyright notices that appear and do not modify the Data in any way. You agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. You may transfer the Data and all accompanying materials on a permanent basis if you retain no copies and the recipient agrees to these End-User Terms. Multi-disc sets may not be transferred on a divided basis.

Restrictions.

Except where you have been specifically licensed to do so by [LICENSEE] and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

No Warranty.

This Data is provided to you "as is," and you agree to use it at your own risk. [LICENSEE] and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty:

[LICENSEE] AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability:

[LICENSEE] AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF [LICENSEE] OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control.

You agree not to export from anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations.

Entire Agreement.

These terms and conditions constitute the entire agreement between [LICENSEE] (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law.

The above terms and conditions shall be governed by the laws of the Illinois [insert "the Netherlands" where European Licensed Data is used], without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of Illinois [insert "the Netherlands" where European Licensed Data is used] for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users.

If the Licensed Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, (i) for acquisitions conducted by the Department of Defense, the Licensed Data is licensed with "Limited Rights" in accordance with the rights set forth at DFARS 252.227-7013(b)(3), TECHNICAL DATA-NONCOMMERCIAL ITEMS, and Licensed Data delivered or otherwise furnished with "Limited Rights" shall be marked with the following "Limited Rights Notice" set forth at DFARS 252.227-7013(f)(3), and shall be treated in accordance with such Notice:

2. Copyright

LIMITED RIGHTS

CONTRACTOR (MANUFACTURER/ SUPPLIER) NAME: NAVTEQ North America, LLC

CONTRACTOR (MANUFACTURER/SUPPLIER) ADDRESS:

222 Merchandise Mart Plaza, Suite 900, Chicago, Illinois 60654

The Government's rights to use, modify, reproduce, release, perform, display, or disclose these technical data are restricted by paragraph (b)(3) of the Rights in Technical Data-Noncommercial Items clause contained in the above identified contract. Any reproduction of technical data or portions thereof marked with this legend must also reproduce the markings. Any person, other than the Government, who has been provided access to such data must promptly notify the above named Contractor.

and; (ii) for civilian agency acquisitions, the Licensed Data is licensed in accordance with the rights set forth at FAR 52.227-14(g)(1), RIGHTS IN DATA-GENERAL (Protection of limited rights data and computer software). In the event that the Contracting Officer requires the delivery of limited rights Licensed Data that has been withheld or would otherwise be withholdable in accordance with FAR 52.227-14(g)(1), the Licensed Data is licensed with "Limited Rights" as set forth in the following "Limited Rights Notice" at FAR 52.227-14(g)(2) (Alternate II), which shall be affixed to the Licensed Data and the Licensed Data shall be treated in accordance with such Notice (which shall be marked on any reproduction of these data, in whole or in part):

LIMITED RIGHTS NOTICE (JUN 1987)

These data may be reproduced and used by the Government with the express limitation that they will not, without written permission of the Contractor, be used for purposes of manufacture nor disclosed outside the Government; except that the Government may disclose these data outside the Government for the following purposes, if any, provided that the Government makes such disclosure subject to prohibition against further use and disclosure: There are no additional purposes permitting disclosure of such Data.


The manufacturer/supplier of the Data is NAVTEQ North America, LLC, 222 Merchandise Mart Plaza, Suite 900, Chicago, Illinois 60654.

If the Contracting Officer refuses to use either of the licenses provided in (i) or (ii), herein, the Contracting Officer must notify NAVTEQ North America, LLC prior to seeking additional or alternative rights in the Licensed Data.

3. Glossary

In order to use this device effectively, please keep the following definitions in mind.

GPS (Global Positioning System)

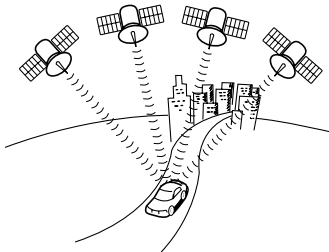

The GPS is a system that uses signals received from a satellite in a maximum orbit of approximately 21,000 km above the earth to indicate your present position (latitude, longitude, altitude).


These satellites were launched into space by the U.S. Department of Defense to be used for military purposes. This system was released for public utility.

Independent navigation

This technology uses data from a vehicle speed sensor and vibration gyro sensor to track the path followed by your vehicle in order to pinpoint your present location.

The present location of your vehicle can be pinpointed even in tunnels and under elevated roads.

Positioning

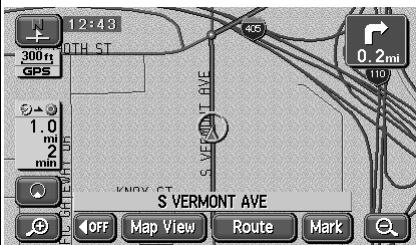


Signals are received from 3 or more GPS satellites to pinpoint the present location of your vehicle. The device will display a **GPS** mark on the upper left part of the present location screen when it is receiving signals from 3 or more satellites and positioning is rendered possible.

(The **GPS** mark is not displayed on the setting or registration screens.)

3. Glossary

2- and 3-dimensional positioning

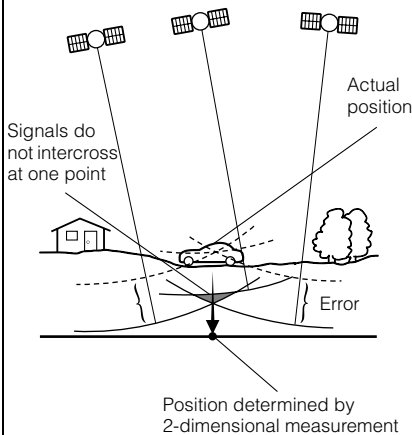

The GPS calculates your position using a 3-point measurement principle.

Signals received from one satellite are used to determine the distance from that satellite to your vehicle. Signals received from 3 satellites can pinpoint your present location.

However, there exists a margin of error in the GPS satellite and navigation unit resulting in 2-dimensional positioning using latitudinal and longitudinal coordinates if signals from only 3 satellites can be received. In such a case, accuracy is low.

Also, when receiving signals from 4 or more satellites, 3-dimensional positioning is effectuated using the latitude, longitude and altitude of your vehicle. 3-dimensional positioning is more accurate than 2-dimensional positioning and the vehicle position display error margin is reduced.

Vibration gyro sensor

This sensor electronically detects in which direction your vehicle turned.

This sensor plays a very important role in the independent navigation function of this device.

4. Index by topic

Information about the maps

[Map displays]

■ Info on how to view the map screens

"How to view the navigation screen" Page 14

■ Info on the present location

"Present location display" Page 26

■ Info on how to move the map

- How to view a map in the vicinity of the present location

"Moving the map (one-touch scroll)" Page 27

- How to view the street name while scrolling

"Setting the Street Name display while scrolling" Page 28

■ Info on how to delete the touch switches appearing on the maps

"Switching the touch switch display" Page 28

■ Info on how to change the map size (reduction scale)

- How to switch from a 250 mile to a 150 ft scale

"Switching the map reduction scale" Page 30

■ Info on how to change the map display method

- How to change the map orientation

"Switching the map orientation" Page 31

- How to display a double screen

"Switching to double screen display" Page 32

■ Info on how to display various data on a map

- How to display POIs

"POI display" Page 35

- How to display the arrival time at the destination

"Switching the touch switch display" Page 28

How to display the present time

"Switching the Time Zone" Page 23

4. Index by topic

■ Info on how to switch the map image quality

- How to change the brightness and contrast
"Screen adjustment" Page 20
- How to change the map color
"Switching the map display color" Page 22

[Retrieving a map]

■ Info on how to retrieve a map

- "How to retrieve maps" Page 44
- How to retrieve a map by entering a POI name or part of an address
"Retrieving a map using a POI name" Page 49
- How to retrieve a map by searching for an address
"Retrieving a map using an address" Page 47
- How to retrieve a map for the police station/hospital
"Retrieving a map in the event of an emergency" Page 55
- How to retrieve a map from a registered point
"Retrieving a map using a memory point" Page 55
- How to retrieve a map from the previous destination
"Retrieving a map using the archive" Page 56
- How to retrieve a map from the intersection name
"Retrieving a map using an intersection name" Page 56
- How to retrieve a map from the freeway exit/entrance name
"Retrieving a map using a freeway exit/entrance name" Page 58
- How to retrieve a map by entering the latitude/longitude
"Retrieving a map using the latitude/longitude" Page 59

Route guidance

[Prior to starting route guidance]

■ Info on how to set a destination

- "Setting a destination" Page 64

■ Info on how to start route guidance

- "Starting route guidance" Page 83

■ Info on how to display alternate routes

- "3-route simultaneous display (3-route search function)" Page 73

[Prior to starting route guidance or while route guidance is in progress]

■ Info on the route up to the destination (guided roads)
"Display route data (guided road information)" Page 72
■ Info on how to add a destination
"Adding a destination" Page 75
■ Info on how set a transit road
"Indicating a transit road" Page 80
■ Info on how to change the displayed route
"Change the search conditions for each interval" Page 77

[While route guidance is in progress]

■ Info on how to change the voice guidance volume
"Setting the volume" Page 25
■ Info on junction intersection landmarks
"Voice guidance" Page 91
■ Stopping route guidance
● How to pause route guidance without deleting the destination(s) "Pausing and restarting route guidance" Page 83
● How to pause route guidance and delete the destination(s) "Deleting a destination" Page 79
■ Info on how to display all-route diagrams
"Redisplaying the all-route display" Page 93
■ Info on how to change the displayed route
■ What to do when having deviated from the displayed route
"Reinitiating a route search" Page 96

4. Index by topic

Others

[Useful functions]

■ Info on how to change the menu screen color

"Setting the wallpaper" "OWNER'S MANUAL/Audio"

■ Info on how to place a mark on the map

- How to mark your home

"Registering, correcting or deleting your home" Page 101

- How to mark a desired location

"Registering memory points" Page 105

"Registering a special memory point" Page 115

[When something isn't clear]

■ I don't understand how to move the list screen

"How to switch the list screens" Page 19

■ I don't understand the screen message

"If one of these messages appears" Page 144

■ Was that a malfunction?

"Before asking for repairs" Page 147

■ When the GPS mark does not appear

"GPS" Page 16

MEMO



INDEX**Numerics**

3-route simultaneous display
(3-route search function)..... 73

A

Accuracy and error 136
All-route display 67
Automatic reroute search..... 99

C

Correcting the distance.... 134

D

Deleting entries from the
destination archive 123
Display seasonally
restricted segment 70
Double screen display 32

F

Ferry crossings..... 87
Free zoom 30

G

GPS 16

H

Heading up display..... 31
Highway junction
guidance 89
How to retrieve maps 44
How to view the
navigation screen..... 14

I

Indicating a transit road 80
Intersection guidance 84

N

Name entry 112
North up display..... 31

O

On-route scroll..... 95
Orientation mark..... 14

P

POI display 35
Point registration 100
Present location
correction 132

R

Rear View Camera
operations 126
Registering detour
memory points..... 119
Registering memory
points..... 101
Registering special
memory points..... 115
Registering your home 101
Reinitiating a route search..... 96
Route data (guided road
information) 72
Route search 63

S

Scale display 15
Setting a destination..... 62
Setting the average
speed 88
Starting, pausing and
restarting route guidance... 83
Switching the distance
remaining display..... 94
Switching the map
reduction scale..... 30
SYSTEM CHECK 125

V

Vehicle position mark..... 15
Voice guidance 91

MEMO

MEMO

For
reference

MEMO

MEMO

For
reference

MEMO



This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

CUSTOMER NOTICE

Please retain this booklet and write in the serial number of your AVN5435 for identification. The serial number is labeled or stamped on the chassis.

Serial No. _____

FUJITSU TEN LIMITED

Contact:FUJITSU TEN CORP. OF AMERICA
19600 So. Vermont Avenue, Torrance, CA 90502
Call:1-800-55-ECLIPSE(Dealer Locator)
:1-800-233-2216(Information)

www.eclipse-web.com